

## Installing Your Freezer

1. Remove all packaging material. This includes the foam base and all adhesive tape holding the freezer accessories inside and outside.
2. Inspect and remove any remains of packing, tape or printed materials before powering on the freezer.
3. Select a suitable location for the freezer on a hard even surface away from direct sunlight or heat source e.g. radiators, baseboard heaters, cooking appliances etc. Any floor unevenness should be corrected.
4. Do not install your freezer in any location not properly insulated or heated e.g. garage etc. Your freezer was not designed to operate in temperature settings below 55° F (13°C).
5. Your freezer is designed for freestanding installation only. It should not be recessed or built-in.
6. Place the freezer on a floor strong enough to support it fully loaded.
7. When moving the freezer, never tilt it more than a 45-degree angle. This could damage the compressor and the sealed system.
8. In case you unplug your freezer or experience an electrical outage, allow 5 minutes before plugging it back in.