

# SERVICE DATA SHEET

## Electric Ranges with ES 300/305/306 Electronic Oven Controls

**NOTICE** - This service data sheet is intended for use by persons having electrical and mechanical training and a level of knowledge of these subjects generally considered acceptable in the appliance repair trade. The manufacturer cannot be responsible, nor assume any liability for injury or damage of any kind arising from the use of this data sheet.

### SAFE SERVICING PRACTICES

To avoid the possibility of personal injury and/or property damage, it is important that safe servicing practices be observed. The following are examples, but without limitation, of such practices.

- Before servicing or moving an appliance remove power cord from electrical outlet, trip circuit breaker to OFF, or remove fuse.
- Never interfere with the proper installation of any safety device.
- GROUNDING:** The standard color coding for safety ground wires is *GREEN* or *GREEN WITH YELLOW STRIPES*. Ground leads are not to be used as current carrying conductors. **It is extremely important that the service technician reestablish all safety grounds prior to completion of service. Failure to do so will create a potential safety hazard.**
- Prior to returning the product to service, ensure that:
  - All electric connections are correct and secure.
  - All electrical leads are properly dressed and secured away from sharp edges, high-temperature components, and moving parts.

- All uninsulated electrical terminals, connectors, heaters, etc. are adequately spaced away from all metal parts and panels.
- All safety grounds (both internal and external) are correctly and securely reassembled.

### Oven Calibration


Set the electronic oven control for normal baking at 350°F. Obtain an average oven temperature after a minimum of 5 cycles. Press **Stop or Clear** to end bake mode.

### Temperature Adjustment

- Set EOC to bake at 550°F.
- Within 5 seconds of setting 550°F, press and hold the bake pad for approximately 15 seconds until a single beep is heard (longer may cause **F11** shorted keypad alarm).
- Calibration offset should appear in the display.
- Use the slew keys to adjust the oven temperature up or down 35°F in 5°F increments.
- Once the desired (-35° to 35°) offset has been applied, press **Stop or Clear**.


**Note:** Changing calibration affects normal Bake mode. The adjustments made will not change the Self-Cleaning cycle temperature.

### Electronic Oven Control (Rear View)

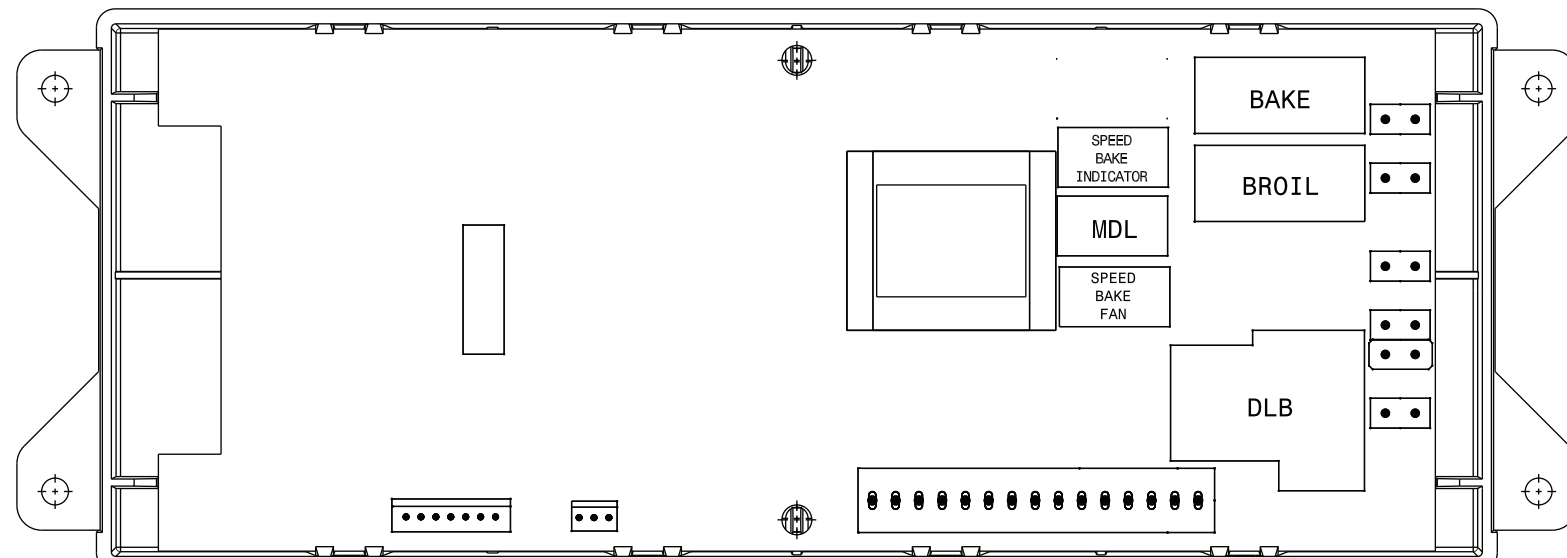

### E.O.C. Control Connections

### P5 CONNECTIONS

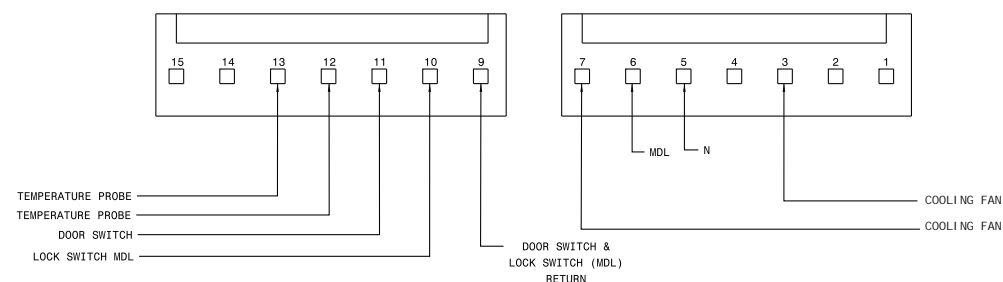

### RTD SCALE

| Temperature °F (°C)          | Resistance (ohms)                |
|------------------------------|----------------------------------|
| 32 ± 1.9 (0 ± 1.0)           | 1000 ± 4.0                       |
| 75 ± 2.5 (24 ± 1.3)          | 1091 ± 5.3                       |
| 250 ± 4.4 (121 ± 2.4)        | 1453 ± 8.9                       |
| 350 ± 5.4 (177 ± 3.0)        | 1654 ± 10.8                      |
| 450 ± 6.9 (232 ± 3.8)        | 1852 ± 13.5                      |
| 550 ± 8.2 (288 ± 4.5)        | 2047 ± 15.8                      |
| 650 ± 9.6 (343 ± 5.3)        | 2237 ± 18.5                      |
| 900 ± 13.6 (482 ± 7.5)       | 2697 ± 24.4                      |
| Probe circuit to case ground | Open circuit/infinite resistance |

### ELECTRONIC OVEN CONTROL FAULT CODE DESCRIPTIONS

| Fault Code | Likely failure condition/cause                                    | Suggested corrective action   |
|------------|---|---|
| F10        | Runaway temperature. Oven heats when no cook cycle is programmed. | <p><b>If Oven is cold:</b></p> <ol style="list-style-type: none"> <li>If fault code is present with cold oven test oven temperature sensor probe circuit resistance. Use RTD scale found in the tech sheet.</li> <li>Replace probe or repair wiring connections if defective.</li> <li>If temperature sensor probe circuit is good but fault code remains when oven is cold replace the EOC.</li> </ol> <p><b>If Oven is overheating:</b></p> <ol style="list-style-type: none"> <li>If oven is severely overheating/heating when no cook cycle is programmed test oven temperature sensor probe circuit resistance using the RED scale found in the service tech sheet. Also verify that the temperature sensor probe is properly installed in the oven cavity.</li> <li>Disconnect power from the range, wait 30 seconds and reapply power. If oven continues to heat when the power is reapplied, replace the EOC. <b>NOTE:</b> Severe overheating may require the entire oven to be replaced should damage be extensive.</li> </ol> |
| F11        | Shorted keypad or selector switch.                                | <ol style="list-style-type: none"> <li>Reset power supply to range - Disconnect power, wait 30 seconds and reapply power.</li> <li>Check/reset ribbon harness connections between touch panel and EOC.</li> <li>Test keyboard circuits. Replace touch panel if defective.</li> <li>If keyboard circuits check good replace the EOC.</li> </ol>  |
| F12        | EOC Internal software error or failure.                           | Disconnect power, wait 30 seconds and reapply power. If fault returns upon power-up, replace EOC.   |
| F13        |   |   |
| F30        | Open oven sensor probe circuit.                                   | Check resistance at room temperature & compare to RTD Sensor resistance chart. If resistance is correct replace the EOC. If resistance does not match the RTD chart replace RTD Sensor Probe. Check Sensor wiring harness between EOC & Sensor Probe connector.   |
| F31        | Shorted oven sensor probe circuit.                                | Check resistance at room temperature, if less than 500 ohms, replace RTD Sensor Probe. Check for shorted Sensor Probe harness between EOC & Probe connector. If resistance is correct replace the EOC.  |
| F90-F95    | Door lock motor or latch circuit failure.                         | <p><b>If lock motor runs:</b></p> <ol style="list-style-type: none"> <li>Test continuity of wiring between EOC and lock switch on lock motor assy. Repair if needed.</li> <li>Advance motor until cam depresses the plunger on lock motor switch. Test continuity of switch contacts. If switch is open replace lock motor assembly.</li> <li>If motor runs and switch contacts and wiring harness test good, replace the EOC.</li> </ol> <p><b>If lock motor does not run:</b></p> <ol style="list-style-type: none"> <li>Test continuity of lock motor windings. Replace lock motor assembly if windings are open.</li> <li>Test lock motor operation by using a test cord to apply voltage. If motor does not operate replace lock motor assy.</li> <li>If motor runs with test cord check continuity of wire harness to lock motor terminals. If harness is good replace the EOC.</li> </ol>  |


| CIRCUIT ANALYSIS MATRIX | EOC RELAYS |             |                        |                    |
|-------------------------|------------|-------------|------------------------|--------------------|
|                         | L1 to Bake | L1 to Broil | L1 to Motor Door Latch | Door Switch COM-NO |
| Bake/Time Bake          | X          | X*          |                        |                    |
| Broil                   |            | X           |                        |                    |
| Clean                   | X          |             |                        |                    |
| Unlocked                |            |             |                        |                    |
| Locking                 |            |             | X                      |                    |
| Locked                  |            |             |                        |                    |
| Unlocking               |            |             | X                      |                    |
| Door Open               |            |             |                        |                    |
| Door Closed             |            |             |                        | X                  |

NOTE: X = Check listed circuits \* = Alternates with bake element

Please note that the warmer drawer feature is only on some models

**IMPORTANT**  
**DO NOT REMOVE THIS BAG**  
**OR DESTROY THE CONTENTS**  
**WIRING DIAGRAMS AND SERVICE**  
**INFORMATION ENCLOSED**  
**REPLACE CONTENTS IN BAG**


# OVEN CIRCUIT

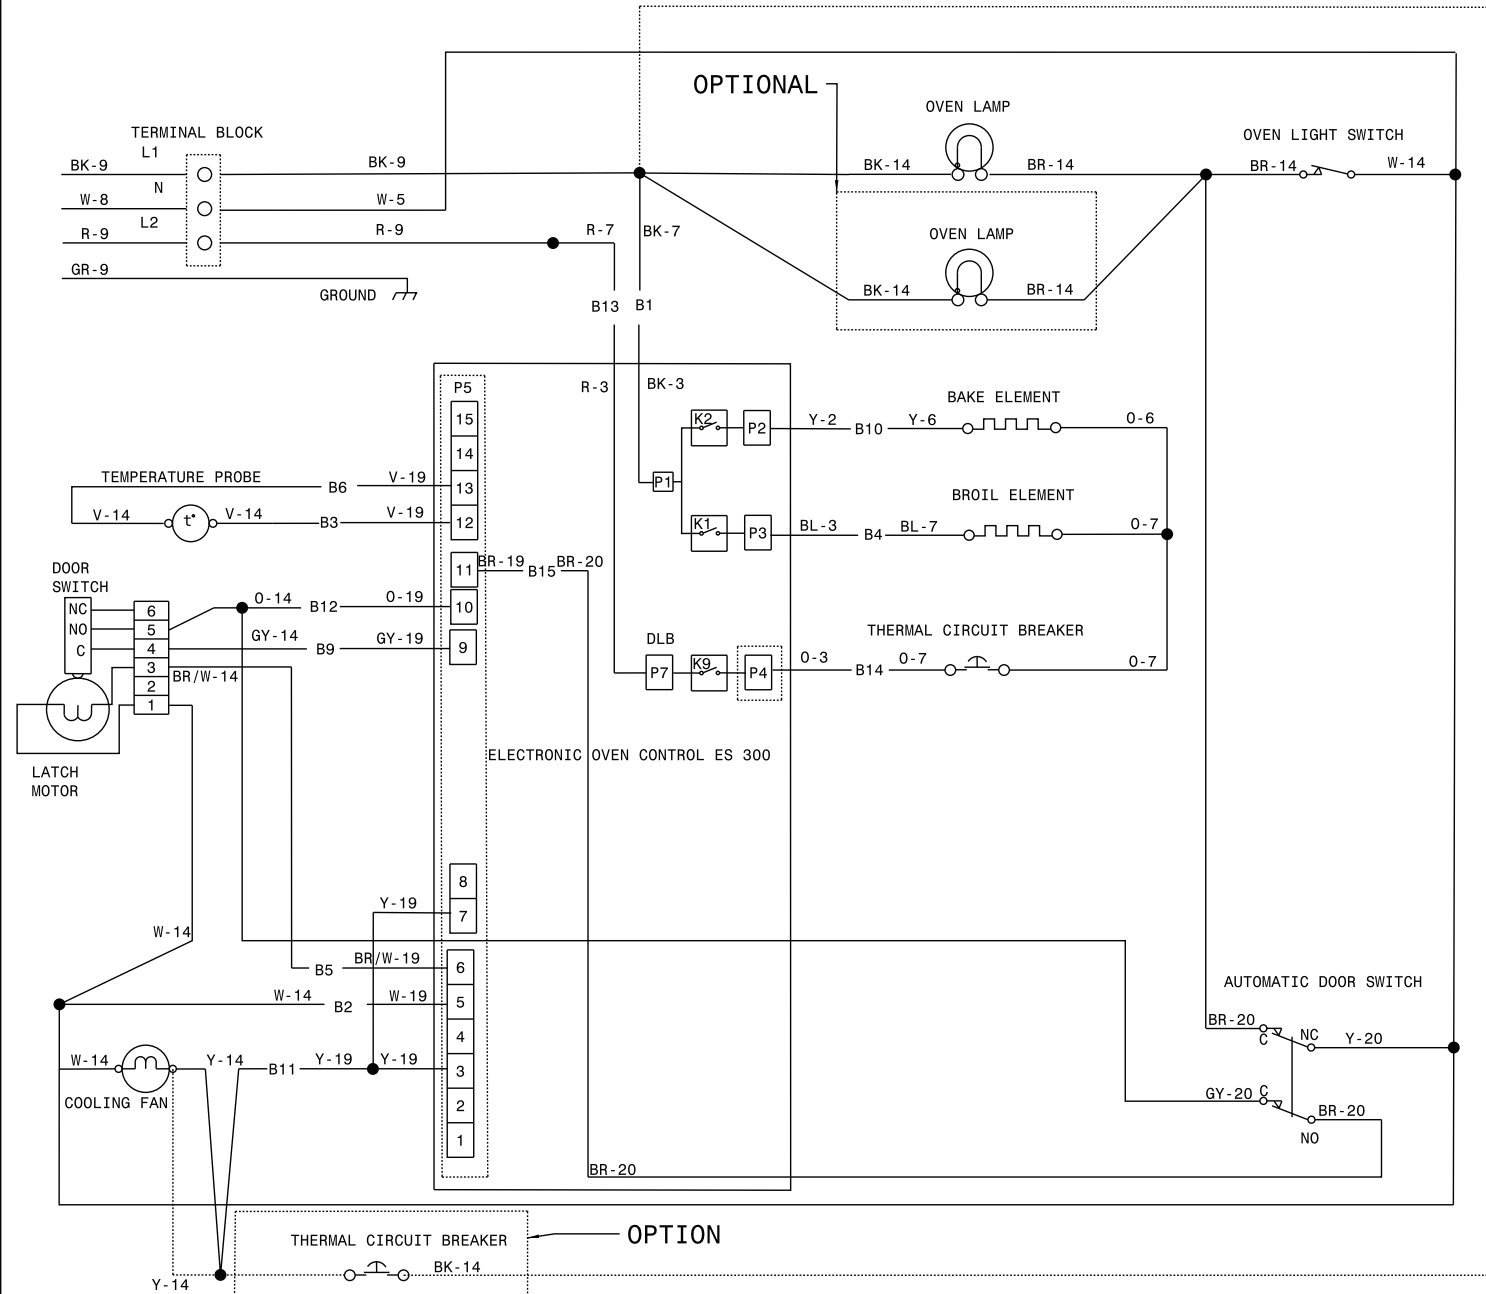

### COLORS

- BK. - BLACK
- G. - GREEN
- W. - WHITE
- R. - RED
- O. - ORANGE
- Y. - YELLOW
- BR. - BROWN
- BL. - BLUE
- GY. - GRAY
- V. - VIOLET
- T. - TAN
- C - COPPER
- P - PINK
- PR - PURPLE
 
### CONNECTOR B




| WIRE | GAUGE | TEMP. °C | CSA     | UL   |
|------|-------|----------|---------|------|
| 1    | 18    | 125      | CL1251  | 3173 |
| 2    | 16    | 125      | CL1251  | 3173 |
| 3    | 14    | 125      | CL1251  | 3173 |
| 4    | 12    | 125      | CL1251  | 3173 |
| 5    | 18    | 150      | EXL-150 | 3321 |
| 6    | 16    | 150      | EXL-150 | 3321 |
| 7    | 14    | 150      | EXL-150 | 3321 |
| 8    | 12    | 150      | EXL-150 | 3321 |
| 9    | 10    | 150      | EXL-150 | 3321 |
| 10   | 18    | 200      | SEW-1   | 3122 |
| 11   | 16    | 200      | SEW-1   | 3122 |
| 12   | 12    | 250      |         | 3252 |
| 13   | 16    | 250      |         | 3252 |
| 14   | 20    | 150      | EXL-150 | 3321 |
| 15   | 8     | 150      | EXL-150 | 3321 |
| 16   | 8     | 60       |         |      |
| 17   | 10    | 60       |         |      |
| 18   | 10    | 200      | SEW-1   | 3122 |
| 19   | 20    | 125      | CL1251  | 3173 |
| 20   | 20    | 200      | SEW-1   | 3122 |
| 37   | 14    | 200      |         | 3512 |

**CAUTION:** DISCONNECT POWER BEFORE SERVICING UNIT. LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRINGS ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.

**PART #** D0004828 **REV: 002**




# SURFACE-ELEMENT COILS

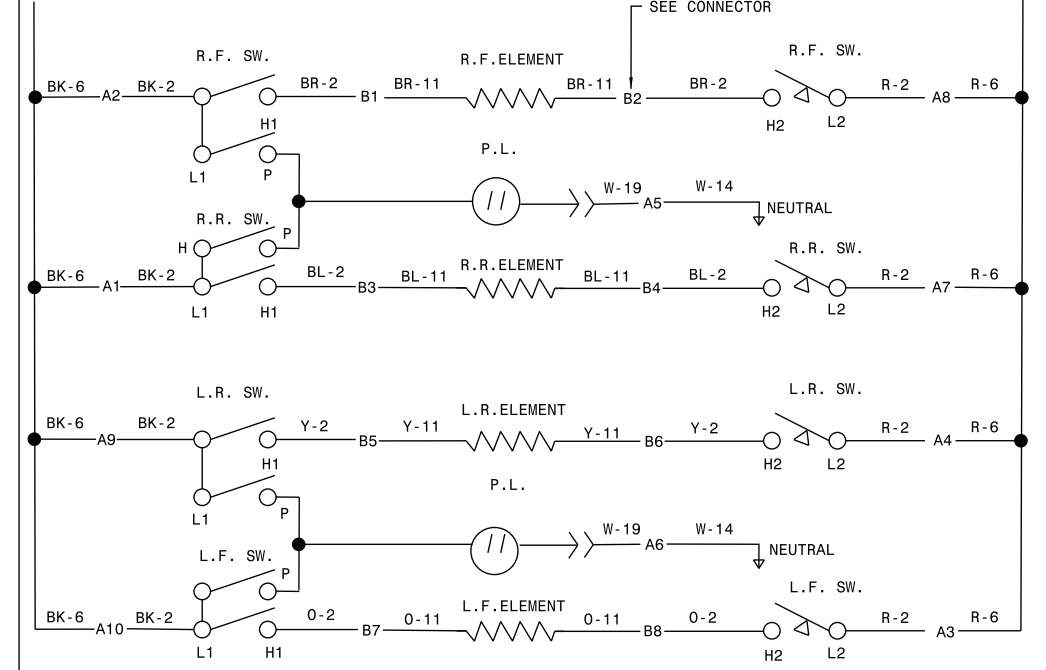

- ### COLORS
- BK. - BLACK
  - G. - GREEN
  - W. - WHITE
  - R. - RED
  - O. - ORANGE
  - Y. - YELLOW
  - BR. - BROWN
  - BL. - BLUE
  - GY. - GRAY
  - V. - VIOLET
  - T. - TAN
  - C - COPPER
  - P - PINK
  - PR - PURPLE

| WIRE | GAUGE | TEMP. °C | CSA     | UL   |
|------|-------|----------|---------|------|
| 1    | 18    | 125      | CL1251  | 3173 |
| 2    | 16    | 125      | CL1251  | 3173 |
| 3    | 14    | 125      | CL1251  | 3173 |
| 4    | 12    | 125      | CL1251  | 3173 |
| 5    | 18    | 150      | EXL-150 | 3321 |
| 6    | 16    | 150      | EXL-150 | 3321 |
| 7    | 14    | 150      | EXL-150 | 3321 |
| 8    | 12    | 150      | EXL-150 | 3321 |
| 9    | 10    | 150      | EXL-150 | 3321 |
| 10   | 18    | 200      | SEW-1   | 3122 |
| 11   | 16    | 200      | SEW-1   | 3122 |
| 12   | 12    | 250      |         | 3252 |
| 13   | 16    | 250      |         | 3252 |
| 14   | 20    | 150      | EXL-150 | 3321 |
| 15   | 8     | 150      | EXL-150 | 3321 |
| 16   | 8     | 60       |         |      |
| 17   | 10    | 60       |         |      |
| 18   | 10    | 200      | SEW-1   | 3122 |
| 19   | 20    | 125      | CL1251  | 3173 |
| 20   | 20    | 200      |         | 3122 |
| 37   | 14    | 200      |         | 3512 |

# GLASS COOKTOP

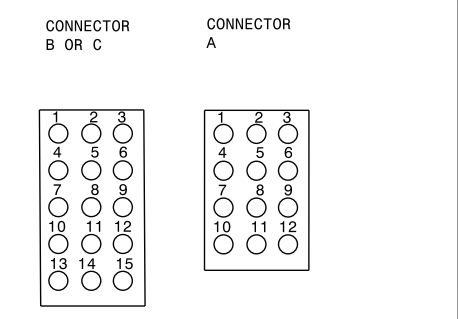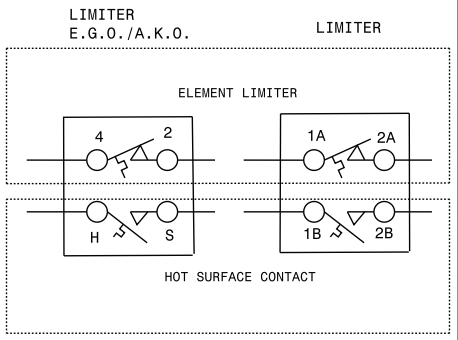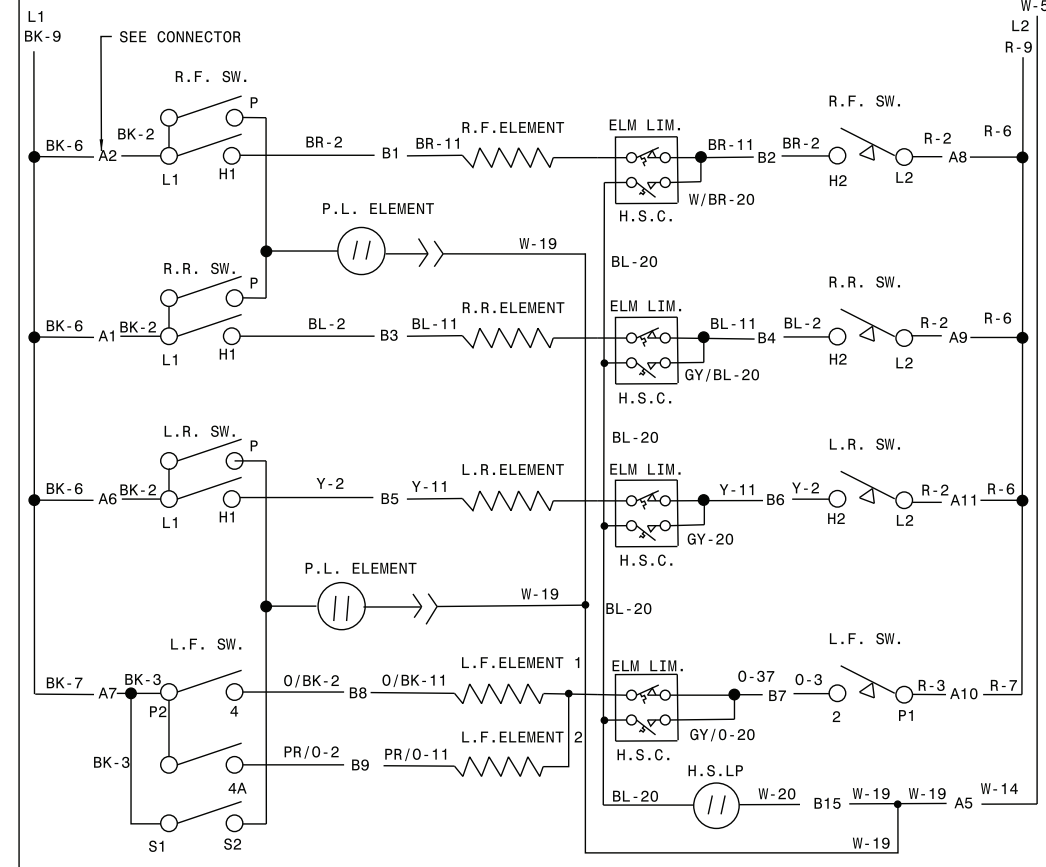

**CAUTION:** DISCONNECT POWER BEFORE SERVICING UNIT. LABEL ALL WIRES PRIOR TO DISCONNECTION WHEN SERVICING CONTROLS. WIRINGS ERRORS CAN CAUSE IMPROPER AND DANGEROUS OPERATION. VERIFY PROPER OPERATION AFTER SERVICING.

**NOTE:** COMPONENTS SHOWN ARE NOT NECESSARILY USED ON ALL MODELS.

**PART #** D0004828 **REV: 002**



