


# ER2001G Exploded View

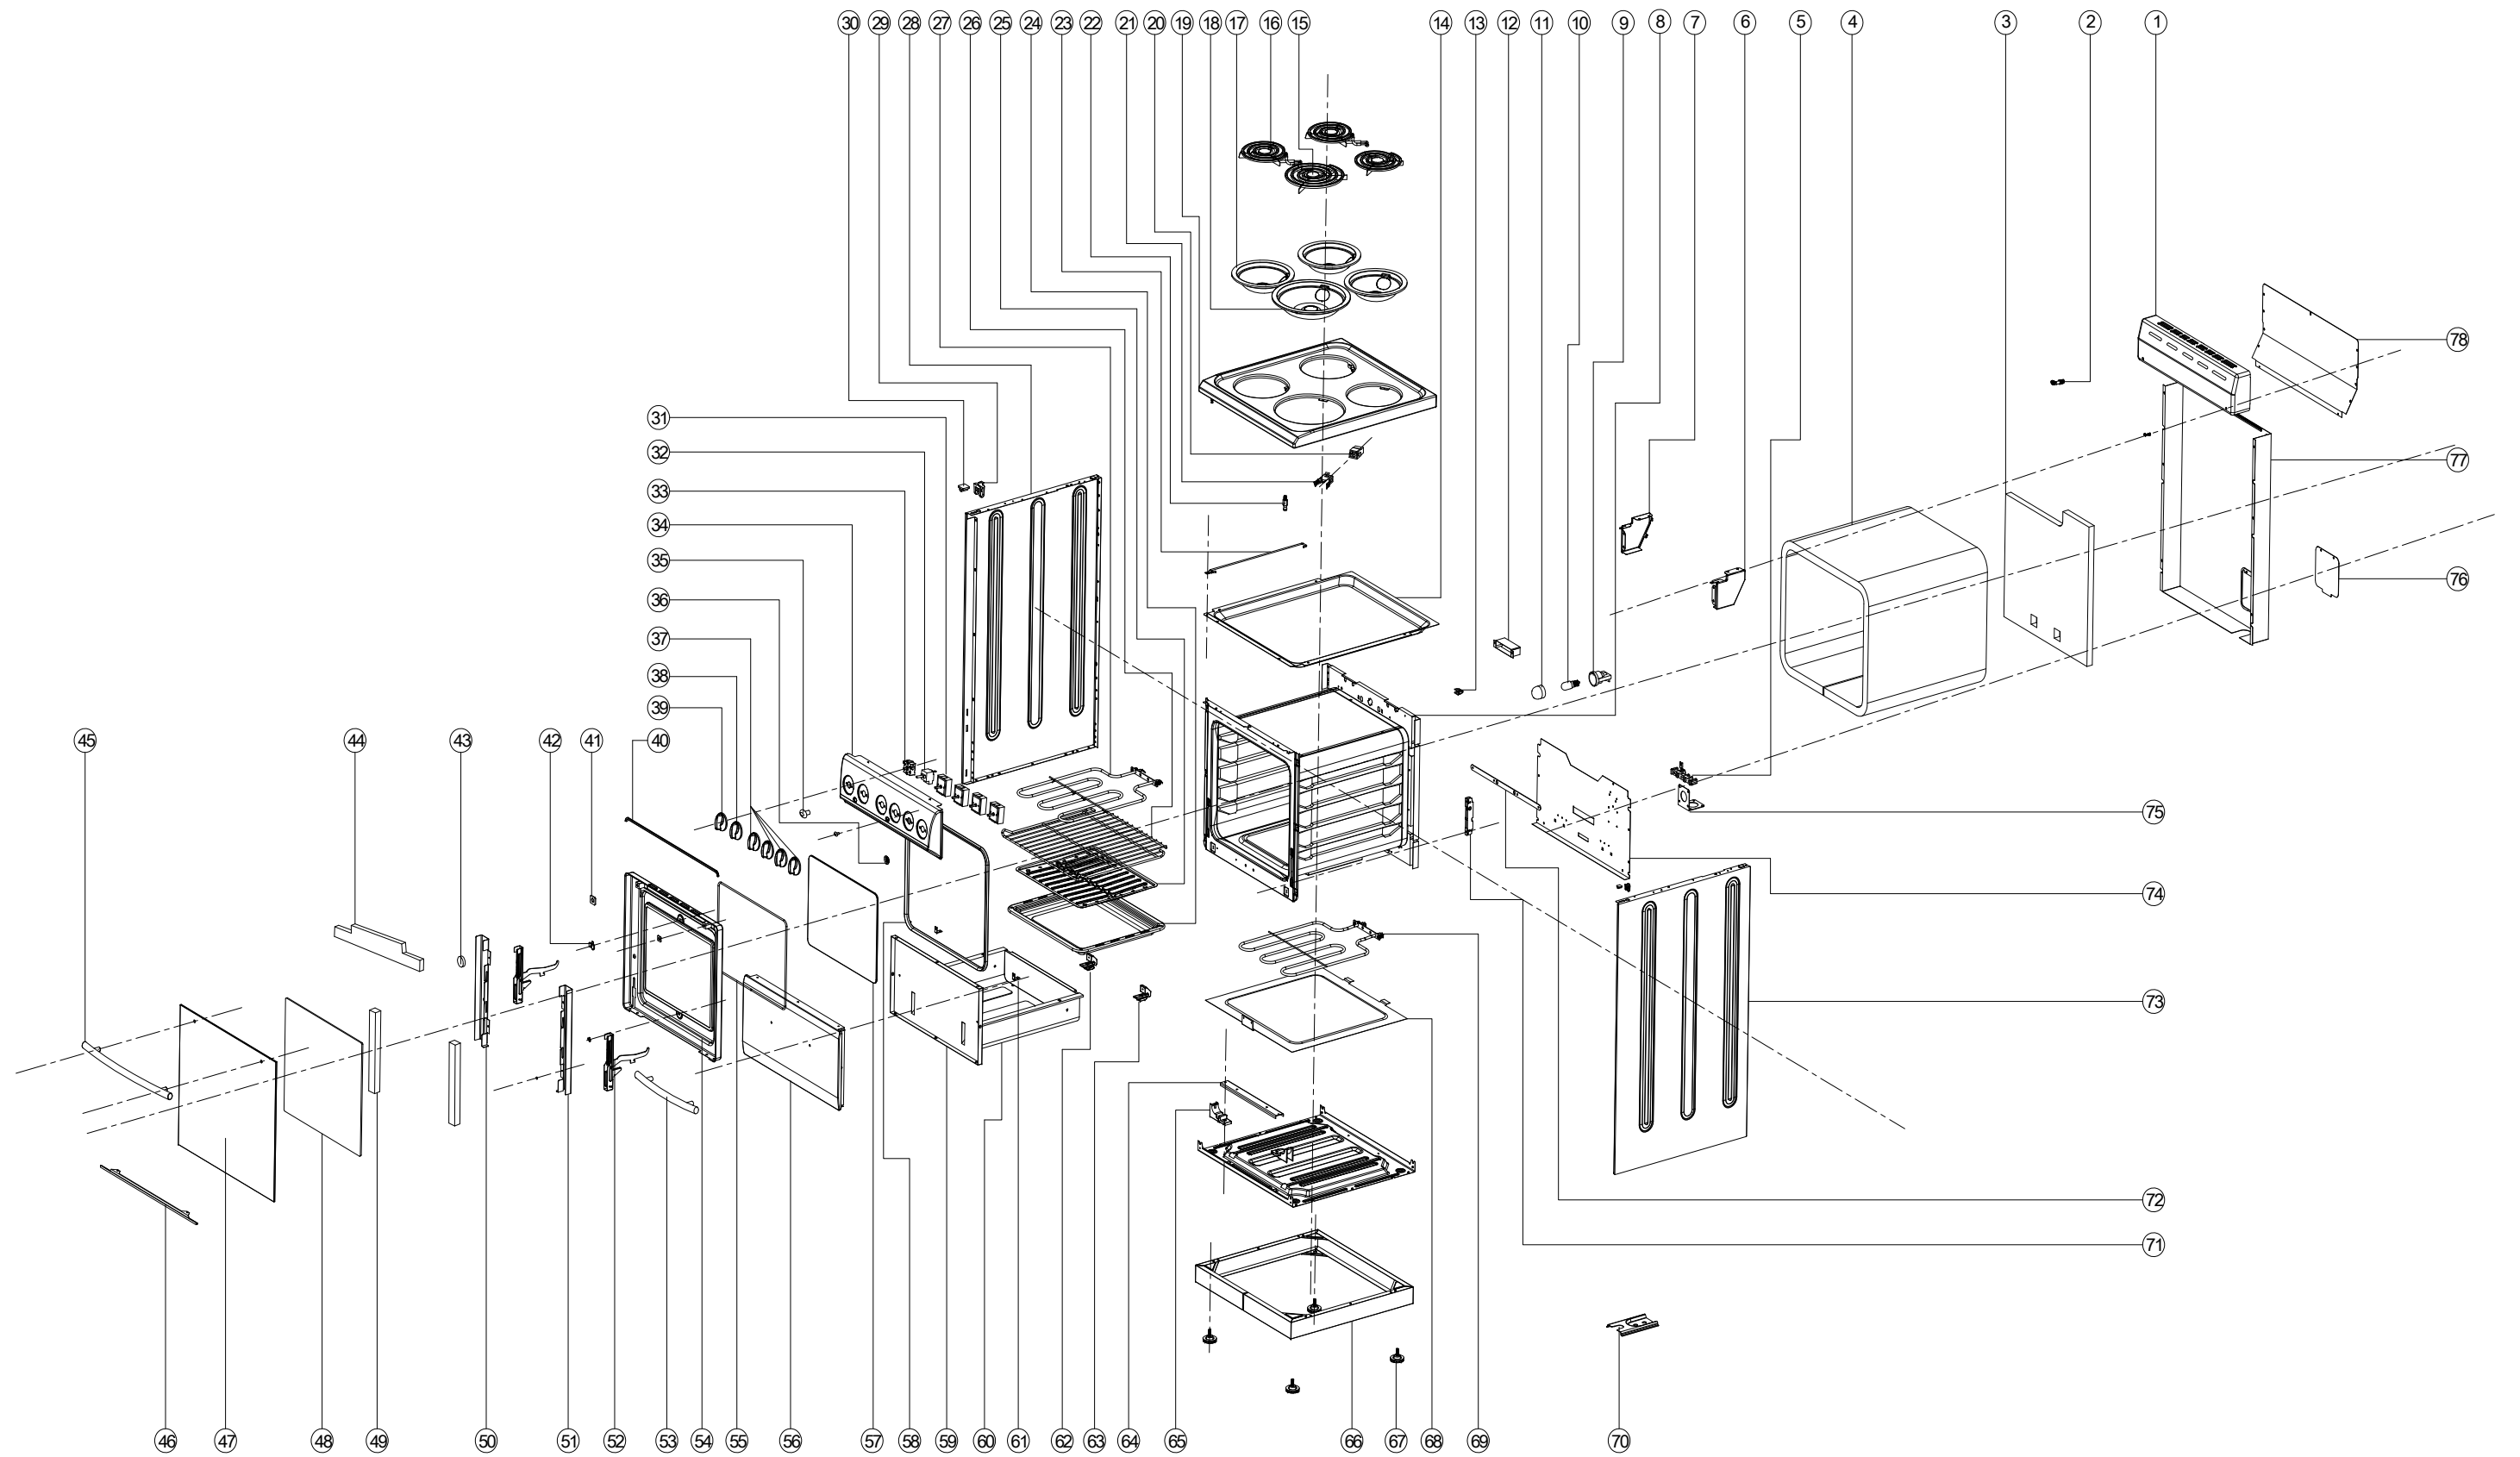

## ER2001G Parts List

No.	Part Number	Description	Q'ty
1	E62A-05	Backsplash	1
2	E62A.71(T)	Positioning Bolt	2
3	E62A-92(T)	Rear Oven Insulation	1
4	E62A-93(T)	Oven Enclosure Insulation	1
5	E62A-65(T)	Terminal	1
6	E62A-07	Right Console	1
7	E62A-06	Left Console	1
8	E62A-25	Oven Cavity	1
9	E62A-66-1	Lamp Holder	1
10	E62A-66-2	Lamp	1
11	E62A-66-3	Lamp Cover	1
12	E62A-42(T)	Funnel	1
13	E62A-40(T)	Thermostat Clamp	1
14	E62A-08	Splash Tray	1
15	E62A.61(T)	8" Burner	1
16	E62A.62(T)	6" Burner	3
17	E62A-36(T)	6" Reflector Bowl	3
18	E62A-37(T)	8" Reflector Bowl	1
19	E62A-04	Cooktop	1
20	E62A-80(T)	Burner Connector	4
21	E62A-38(T)	Metal Clip	4
22	E62A-68(T)	Lock Pin	2
23	E62A.70(T)	Support Bar	1
24	E62A-33(T)	Broiler Pan	1
25	E62A-34(T)	Broiler Grid	1
26	E62A.67(T)	Wire Rack	1
27	E62A.56(T)	Broiler Heater	1
28	E62A-16(T)	Left Side Plate	1
29	E62A-39(T)	Plate Hinge	2
30	E62A-86(T)	Plate Cushion	4
31	E62A.58(T)	Power Switch	4
32	E62A.60(T)	Thermostat	1
33	E62A.59(T)	Function Switch	1
34	E62A-09	Control Panel	1
35	E62A-87(T)	Indicator Light Cover	2
36	E62A-49(T)	Inner Glass Fixing Washer	2
37	E62A-89(T)	Power Switch Knob	4
38	E62A-90(T)	Thermostat Knob	1
39	E62A-91(T)	Function Switch Knob	1
40	E62A-88(T)	Door Upper Seal	1
41	E62A-97(T)	Washer	2
42	E62A-53(T)	Fixing Base	2
43	E62A-98(T)	Washer	2

44	E62A-94(T)	Door Upper Insulation	1
45	E62A.69(T)	Door Handle	1
46	E62A-23(T)	Door Lower Strip	1
47	E62A-76(T)	Door Glass	1
48	E62A-77(T)	Middle Inner Glass	1
49	E62A-95(T)	Door Side Insulation	2
50	E62A-46-1(T)	Glass Left Side Support	1
51	E62A-46-2(T)	Glass Right Side Support	1
52	E62A.73-1(T)	Door Hinge (Male)	2
53	E62A.74(T)	Drawer Handle	1
54	E62A-22(T)	Door Frame	1
55	E62A-79(T)	Inner Glass Gasket	1
56	E62A-13(T)	Drawer Panel	1
57	E62A-75(T)	Inner Glass	1
58	E62A-78(T)	Oven Seal	1
59	E62A-14(T)	Front Plate of Drawer	1
60	E62A-10(T)	Drawer	1
61	E62A-15(T)	Connecting Bracket	2
62	E62A-81(T)	Drawer Left Slide Block	1
63	E62A-82(T)	Drawer Right Slide Block	1
64	E62A-32(T)	Pressing Plate	1
65	E62A-83(T)	Slide Block Supporter	2
66	E62A-18	Bottom Plinth	1
67	E62A-84(T)	Leveling Leg	4
68	E62A-35(T)	Partition Plate	1
69	E62A.57(T)	Bake Heater	1
70	E62A-54(T)	Anti-tip Bracket	1
71	E62A.73-2(T)	Door Hinge Female	2
72	E62A-47(T)	Bake Heater Bracket	1
73	E62A-13(T)	Right Side Plate	1
74	E62A-03	Inner Back Plate	1
75	E62A-21(T)	Conduit Bracket	1
76	E62A-44	Terminal Access Plate	1
77	E62A-02	Outer Back Plate	1
78	E62A-01	Back Plate of Backsplash	1