



# **Electrolux**

## Factory Parts Catalog

Product No.	E30EW85GSS1
	37066373M70S1
Series	30" double
Color	stainless
Market	North America
Wiring Diagram	318046124
Owner's Guide	318205131
Installation Instructions	318201524
Service Data Sheet	318047437
Quick Start Guide	318203413

# **Electrolux**

Electrolux Major Appliances  
North & Latin America  
P.O. BOX 212378  
AUGUSTA, GA 30917

 
 
 
Publication No.  
**5995515698**  
08/05/28  
(EN/SERVICE/ECL)  
377

**30" DOUBLE ELECTRIC  
WALL OVEN**

Model No.  
**E30EW85G**

Copyright © 2008 Electrolux Home Products, Inc.  
All rights reserved.

### CONTROL PANEL

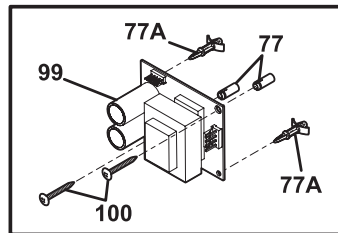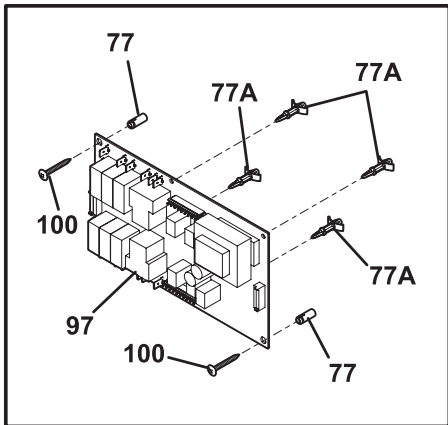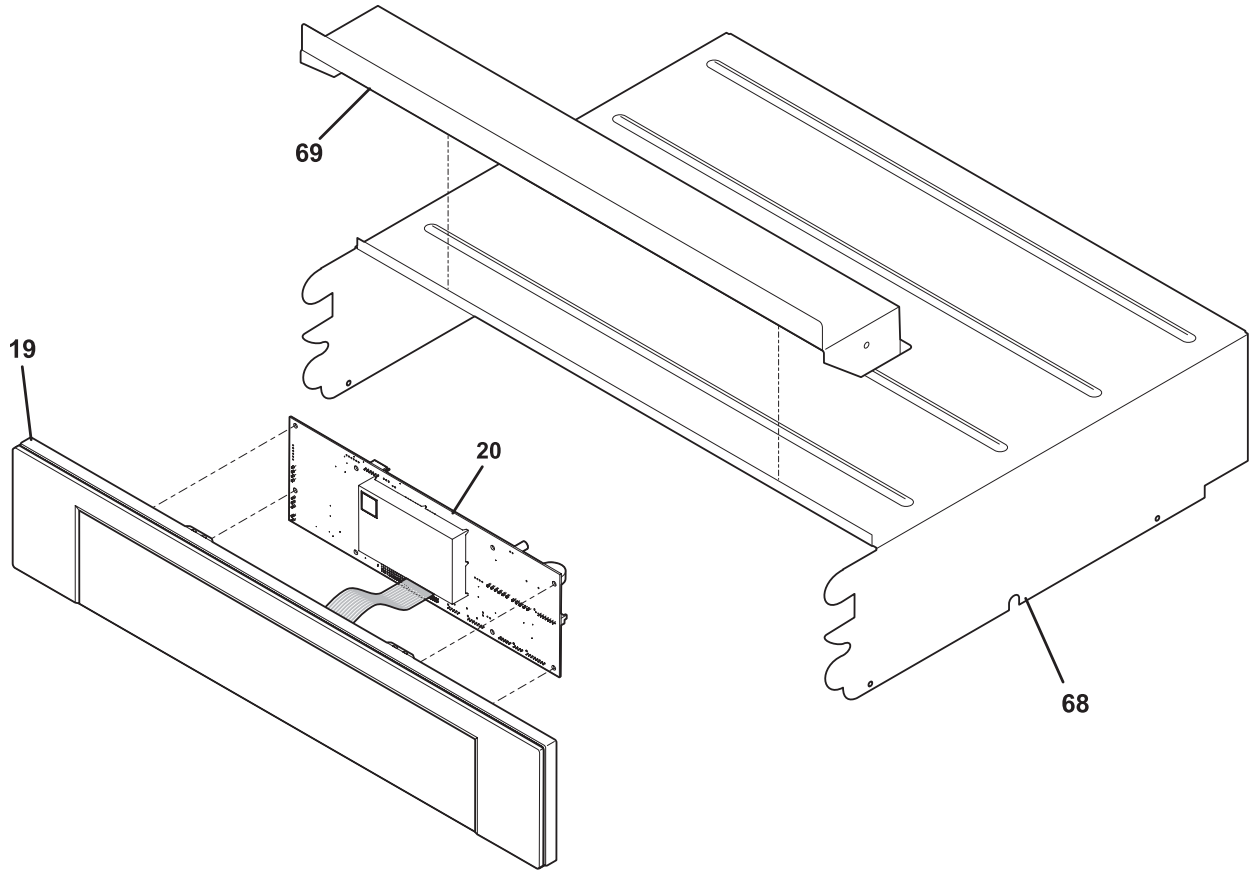

CE30EW85GPS1

**CONTROL PANEL**

---

POS. NO	PART NO.	DESCRIPTION
19	7318244830	Control Panel, assembly, w/stainless trm
20 #	7316516551	Controller, electronic, dual oven, ES610W6
20*	7316524400	Screw, control mtg, 6-32 x .25, (5)
68	7318237220	Housing, top/control
69	7318237320	Shield, control
77	7316247900	Spacer, power board
77A	7316114100	Spacer, (4)
97 #	7316443926	Board, relay, dual oven
99 #	7316535200	Board, power supply, 8V, (2)
100	75303297477	Screw, 6-20 x 1 1/4
* #	7318370349	Wiring Harness, 8V power board
*	75303211311	Screw, 8 x 0.500



---

**UPPER OVEN**


---

POS. NO	PART NO.	DESCRIPTION
1	7318259220	Back, main
2	7318376700	Shield, oven top
6	7318240103	Shelf, oven, fixed
6A	7318365800	Rack, broiler pan
6B	7318345404	Shelf, oven, extendable, (2)
6C	7318345410	Shelf, oven, extendable
7	7318368300	Pin, locking, (2)
9	7318138801	Pan, broiler
10	7318126401	Insert, broiler pan
11	7318240014	Glide & Support assy, oven shelves, RH
11A	7318240015	Glide & Support assy, oven shelves, LH
12	7316445501	Switch, oven light, door frame
13	7318603913	Bracket, ladder mtg., (4)
13*	75304456367	Rivet, ladder bracket, (8)
14	7318903403	Switch, rack sensing
15	7318241002	Lamp, oven, (2), halogen
20	7318239001	Gasket, oven door
37 #	7316217002	Probe, oven temp
37*	7318373001	Bracket, receptacle, temp probe
37*	75304435874	Plate, covering, probe
53 #	7318601302	Probe, meat temp
54 #	7318601206	Receptacle, probe
55	7316247700	Nut, mounting, (2)
57	7318361610	Panel, service
*	708016432	Screw, truss head, 8-18 x 0.375
58	7318330501	Insulation, service panel, 12.47 x 14.77
58A	7318386100	Insulation, oven wrapper
58B	7318362100	Insulation, rear & bottom, oven wrapper
58D	7318362124	Insulation, 26 x 9.5 x .5
66 #	7318255806	Element, broil, 4000W
67 #	7318601601	Element, hidden bake
* #	7318231838	Wiring Harness, bake element
70	7318259102	Shield, insulation, sides, (2)
71	7318376800	Panel, rear box
72	7318377100	Cover, main back
74	7318283600	Bumper
76	7318056241	Front, oven
77	7316247900	Spacer, power board
77A	7316114100	Spacer, (4)
78	7318243601	Bracket, stopping
80	75303320846	Plate, oven mtg
81	7318192400	Spring, oven
82	7318258730	Shield, insulation, lower
83	7318386001	Liner, oven assy
86	7318241406	Receptacle, hinge, (2)
86*	75304461333	Screw, 10-32 x 17/32
88	7318250203	Rod, latch, w/bushing
88*	7318167300	Clip, rod
89 #	7318095965	Motor, latch assy, w/brkt & switch
*	75303316982	Foam seal, (2)
97A#	7316519200	Board, variable speed



 
---

**UPPER OVEN**


---

POS. NO	PART NO.	DESCRIPTION
98	75303297477	Screw, 6-20 x 1 1/4
99	7318372600	Bracket, oven, (2)
107	7318906601	Cover, fan
108#	7318073019	Motor, blower
109	7318398300	Fan Blade
111	7318399800	Nut-fan retainer
125#	7318398200	Motor, fan
127	7318357003	Adapter Assembly, w/vent tube, and catalyst
129	75303311164	Spring
131	7318376911	Channel, air, upper
132	7318237603	Divider, air channel
133	7318237501	Channel, air, lower
142	7318123910	Deflector
143	7318172904	Support, wire
161#	7318255507	Element, convection, 1600 W
163	7318531703	Spacer, (2)
185	7318531800	Spacer, oven shield, (2)
186	7318236901	Bracket, oven, lower
*	75304436875	Screw, 8-18 X 1/2, black
186A	7318237001	Bracket, oven, upper
186B	7318237101	Bracket, oven, side, (2)
264	7318278611	Trim, vent
272	7318249403	Tube, protector
* #	7318532107	Wiring Harness, main, upper oven
*	75303211311	Screw, 8 x 0.500
*	75303323129	Screw, 8 X 0.750
*	75303323139	Screw, 10-24 x 0.906
*	75303323277	Screw, 8-18 X 13/32
*	75303324184	Screw, 8-18 x 5/16, black, (4)
*	75304415832	Screw, 8-18 x 0.406

LOWER OVEN

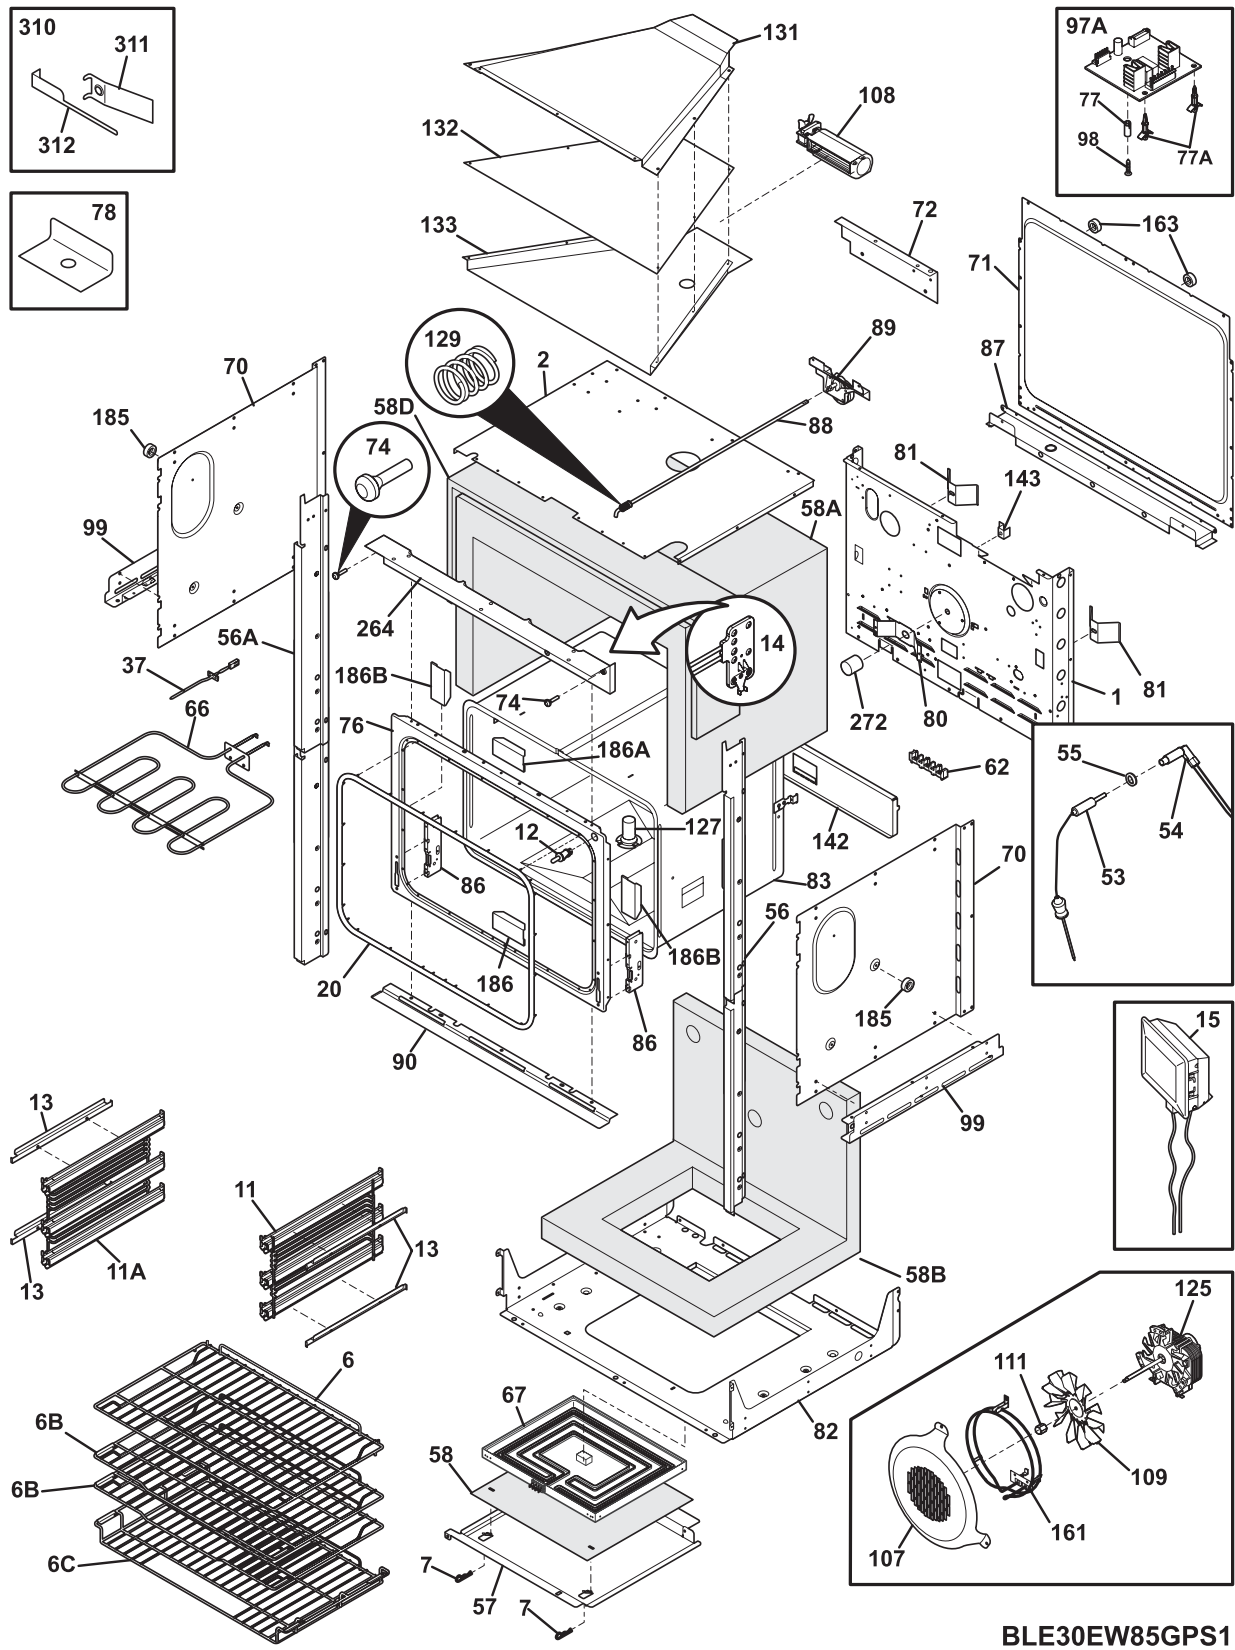

BLE30EW85GPS1


---

**LOWER OVEN**

 
---

POS. NO	PART NO.	DESCRIPTION
1	7318259220	Back, main
2	7318376700	Shield, oven top
6	7318240103	Shelf, oven, fixed
6B	7318345404	Shelf, oven, extendable, (2)
6C	7318345410	Shelf, oven, extendable
7	7318368300	Pin, locking, (2)
11	7318240014	Glide & Support assy, oven shelves, RH
11A	7318240015	Glide & Support assy, oven shelves, LH
12	7316445501	Switch, oven light, door frame
* #	7318370377	Wiring Harness, door switch
13	7318603913	Bracket, ladder mtg., (4)
13*	75304456367	Rivet, ladder bracket, (8)
14	7318903403	Switch, rack sensing
15	7318241002	Lamp, oven, (2), halogen
20	7318239001	Gasket, oven door
37 #	7316217002	Probe, oven temp
37*	7318373001	Bracket, receptacle, temp probe
37*	75304435874	Plate, covering, probe
53 #	7318601302	Probe, meat temp
54 #	7318601206	Receptacle, probe
55	7316247700	Nut, mounting, (2)
56	7318283122	Trim, side, black, RH
56A	7318283123	Trim, side, black, LH
57	7318361610	Panel, service
*	708016432	Screw, truss head, 8-18 x 0.375
58	7318330501	Insulation, service panel, 12.47 x 14.77
58A	7318386100	Insulation, oven wrapper
58B	7318362100	Insulation, rear & bottom, oven wrapper
58D	7318362124	Insulation, 26 x 9.5 x .5
62	7316056000	Terminal Block
62*	75303323139	Screw, 10-24 x 0.906
62*	75303323144	Nut, 10-32
66 #	7318255806	Element, broil, 4000W
67 #	7318601601	Element, hidden bake
* #	7318231838	Wiring Harness, bake element
70	7318259102	Shield, insulation, sides, (2)
71	7318376800	Panel, rear box
72	7318377100	Cover, main back
74	7318283600	Bumper
76	7318056241	Front, oven
77	7316247900	Spacer, power board
77A	7316114100	Spacer, (4)
78	7318243601	Bracket, stopping
80	75303320846	Plate, oven mtg
81	7318192400	Spring, oven
82	7318258730	Shield, insulation, lower
83	7318386001	Liner, oven assy
86	7318241406	Receptacle, hinge, (2)
86*	75304461333	Screw, 10-32 x 17/32
87	7318260600	Bracket, cable mtg.
*	75303323136	Screw ground

LOWER OVEN

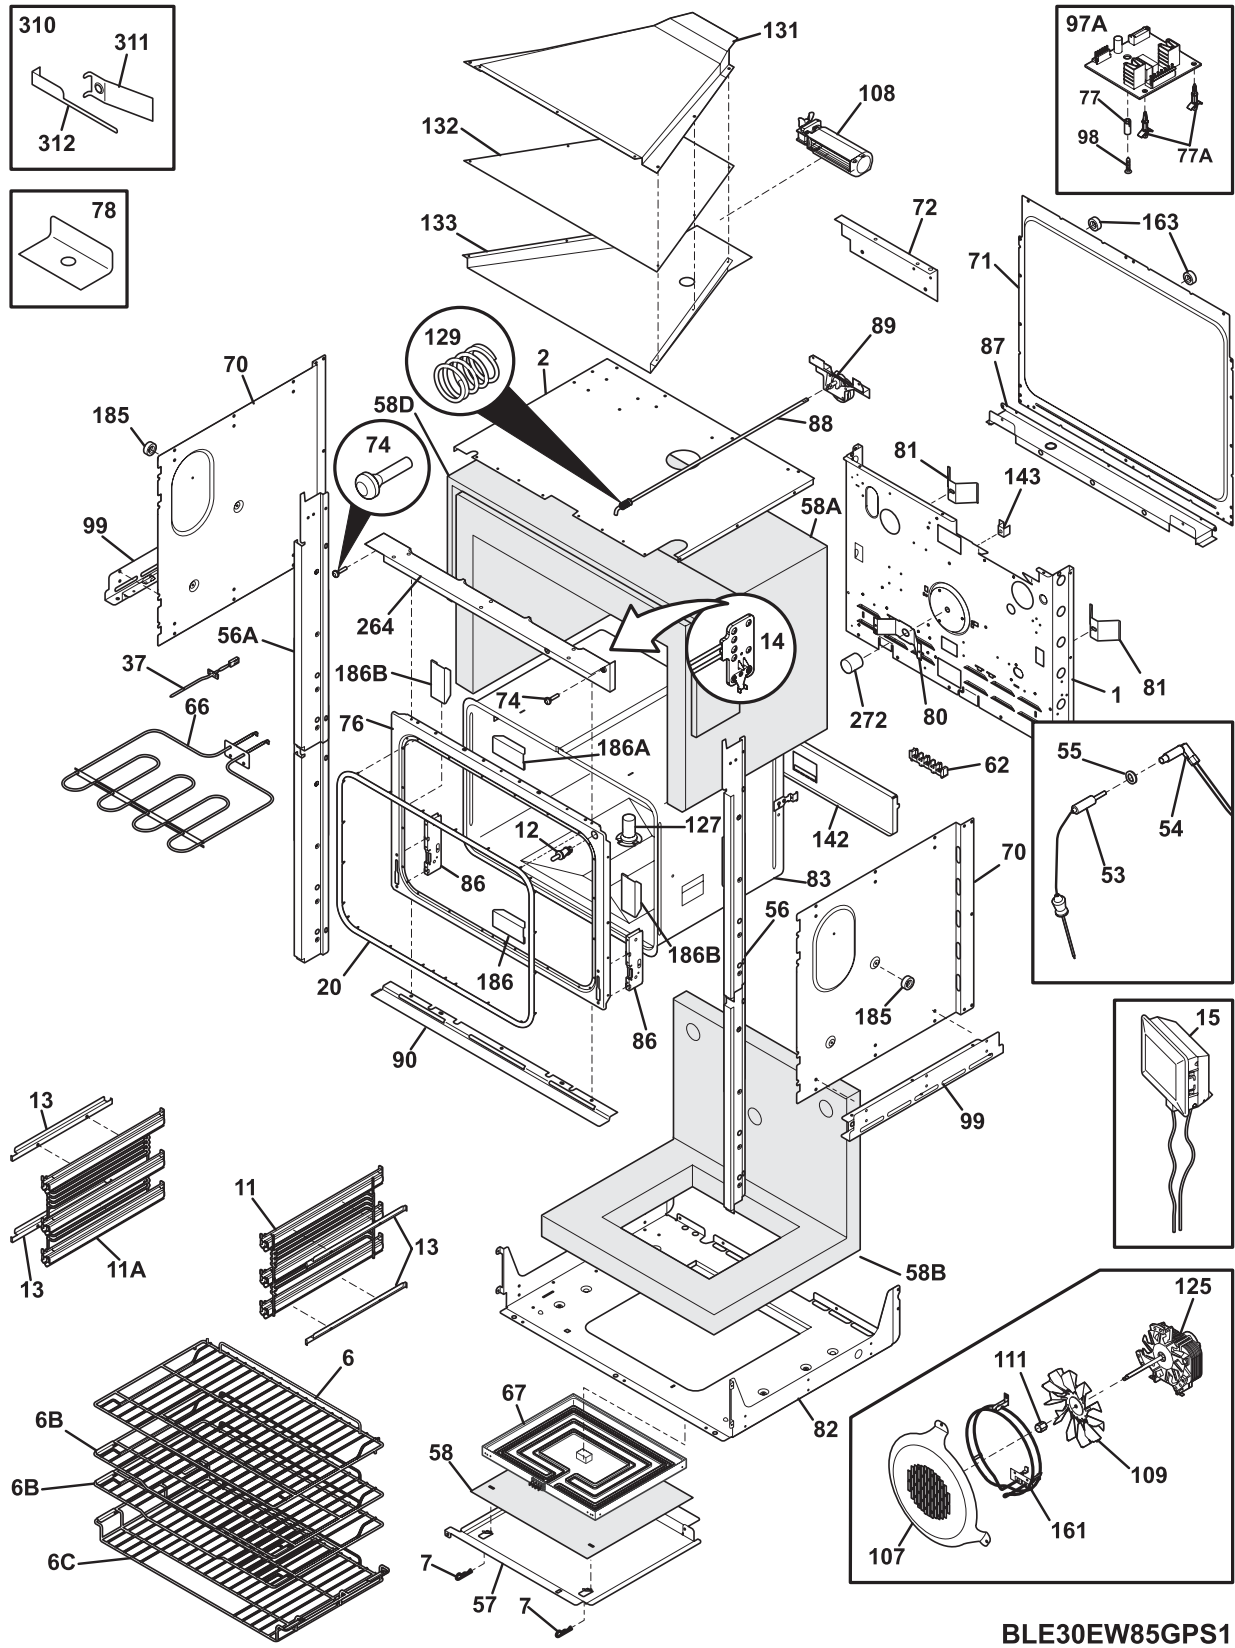

BLE30EW85GPS1

---

**LOWER OVEN**


---

POS. NO	PART NO.	DESCRIPTION
88	7318250203	Rod, latch, w/bushing
88*	7318167300	Clip, rod
89 #	7318095965	Motor, latch assy, w/brkt & switch
*	75303316982	Foam seal, (2)
90	7318370403	Bracket, gutter, black
97A#	7316519200	Board, variable speed
98	75303297477	Screw, 6-20 x 1 1/4
99	7318256203	Bracket, side, bottom, (2)
107	7318906601	Cover, fan
108#	7318073019	Motor, blower
109	7318398300	Fan Blade
111	7318399800	Nut-fan retainer
125#	7318398200	Motor, fan
127	7318357003	Adapter Assembly, w/vent tube, and catalyst
129	75303311164	Spring
131	7318376911	Channel, air, upper
132	7318237603	Divider, air channel
133	7318237501	Channel, air, lower
142	7318123910	Deflector
143	7318172904	Support, wire
161#	7318255507	Element, convection, 1600 W
163	7318531703	Spacer, (2)
185	7318531800	Spacer, oven shield, (2)
186	7318236901	Bracket, oven, lower
*	75304436875	Screw, 8-18 X 1/2, black
186A	7318237001	Bracket, oven, upper
186B	7318237101	Bracket, oven, side, (2)
264	7318278511	Trim, vent
272	7318249403	Tube, protector
310	75304435864	Kit, cabinet mtg, w/instructions
311	7318246000	Bracket, cabinet mtg
311*	75304438005	Screw, 6 x 1, black
312	7318246702	Tool, cabinet bracket, RH
312	7318246703	Tool, cabinet bracket, LH
* #	7318394443	Box & wires assy
* #	7318532109	Wiring Harness, main, lower oven
* #	7318370364	Wiring Harness, power board, to triac
* #	7318370396	Wiring Harness, communication, lower oven, main
*	75303211311	Screw, 8 x 0.500
*	75303311306	Screw, 8-18 x 0.375, (8)
*	75303323129	Screw, 8 X 0.750
*	75303323277	Screw, 8-18 X 13/32
*	75303324184	Screw, 8-18 x 5/16, black, (4)
*	75304415832	Screw, 8-18 x 0.406



 
---

**DOORS**


---

POS. NO	PART NO.	DESCRIPTION
3	7318235902	Door Front Assembly, w/glass, stainless, w/frame
4	7318238314	Holder, glass, top
8	7318238020	Glass, door, middle, (2)
10	75304436876	Screw & Washer, handle mtg., 10-24 x 1/2
16	7318237920	Glass, oven interior
18	7318377501	Seal, middle glass, (2)
21	7318369410	Spacer, handle
23	7318244304	Hinge Assy, (2)
*	75304437044	Screw, 10-32 x 1/4, black, (4)
24	7318390401	Trim, door, black, lower
29	75304436441	Bumper, base, (4)
32	7318382601	Deflector, middle glass, (2)
39	7318238904	Handle, oven door, stainless
40	7318377400	Bracket, glass holder
193	7316210800	Plug, button
*	7318163602	Cleaner, stainless steel
*	75304436875	Screw, 8-18 X 1/2, black
*	75304443263	Screw, 6-20 x 3/8, black

WIRING DIAGRAM

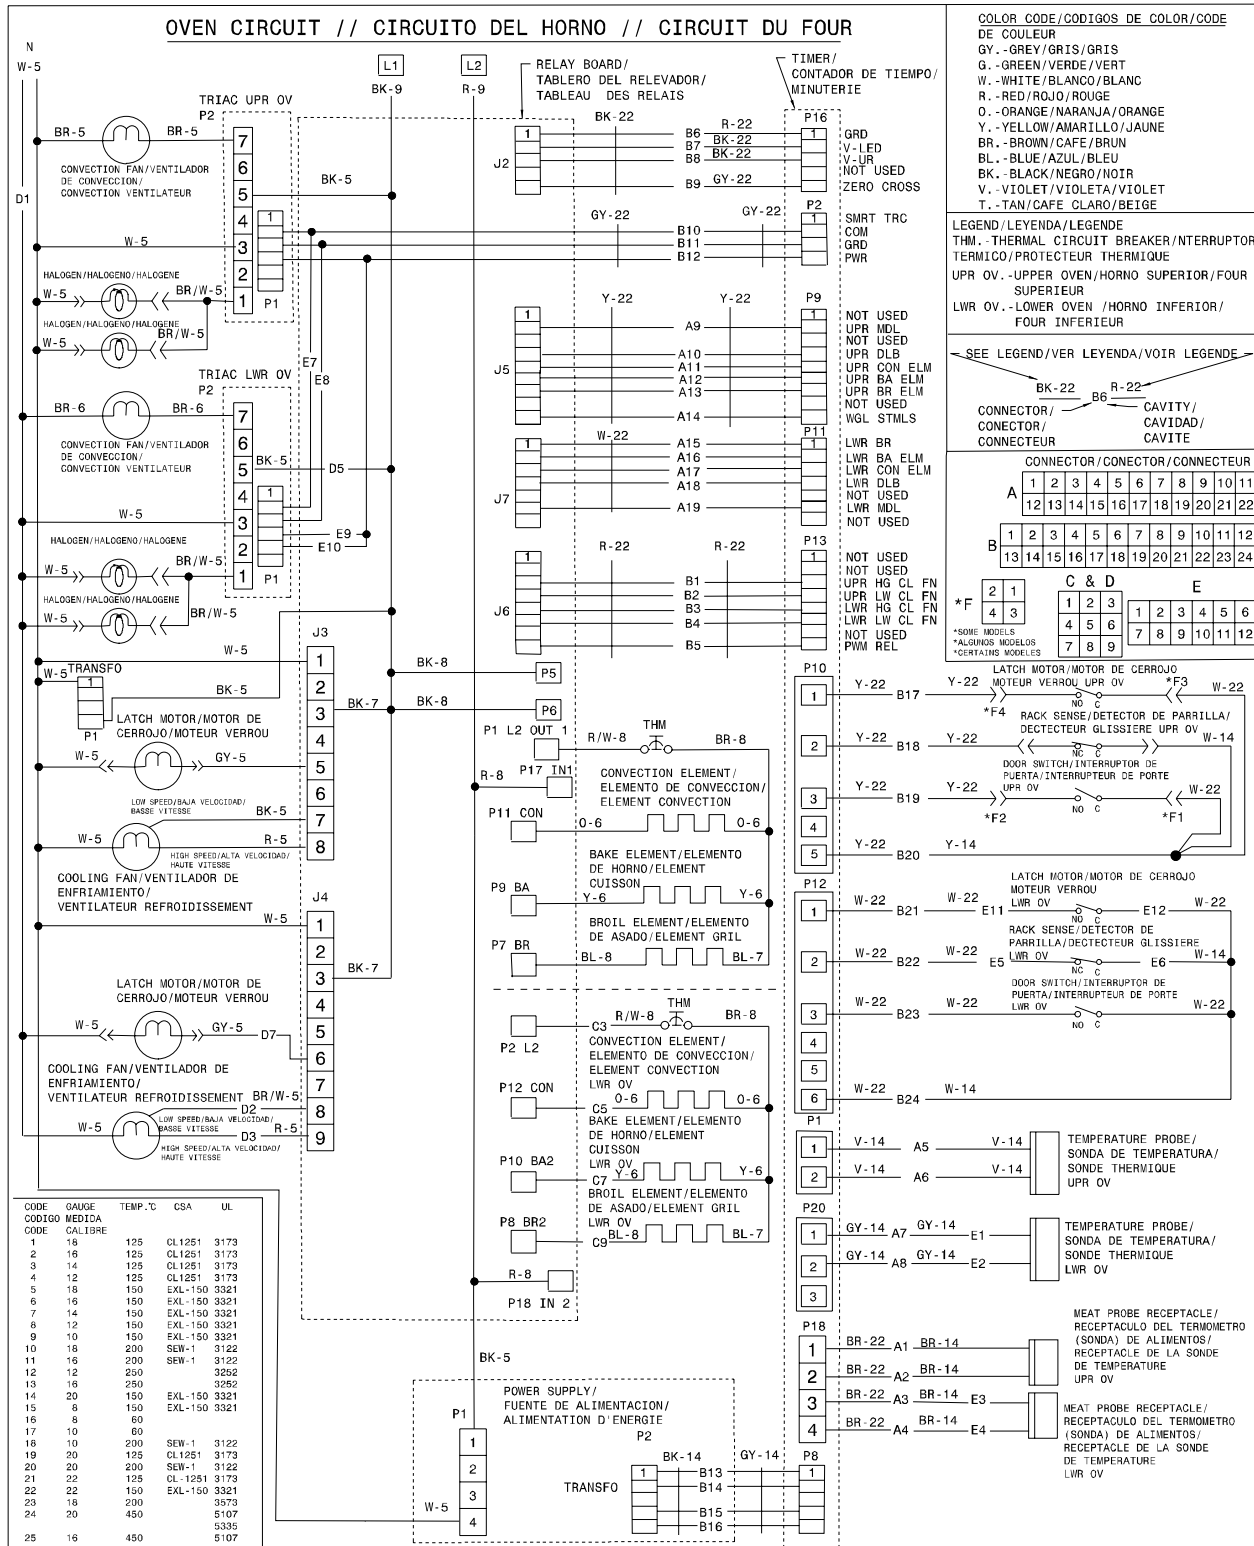

**CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.**  
**ATENCION: CORTAR LA CORRIENTE ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.**  
**ATTENTION: COUPEZ L'ALIMENTATION AVANT D'EFFECTUER LA REPARATION.**

**318046124 REV:J**