

**KitchenAid®**

**24" ELECTRIC DOUBLE WALL OVEN**


**MODELS:**

KODC304EBL01 (Black)

KODC304EWH01 (White)

KODC304ESS01 (Stainless)


# CONTROL PANEL PARTS

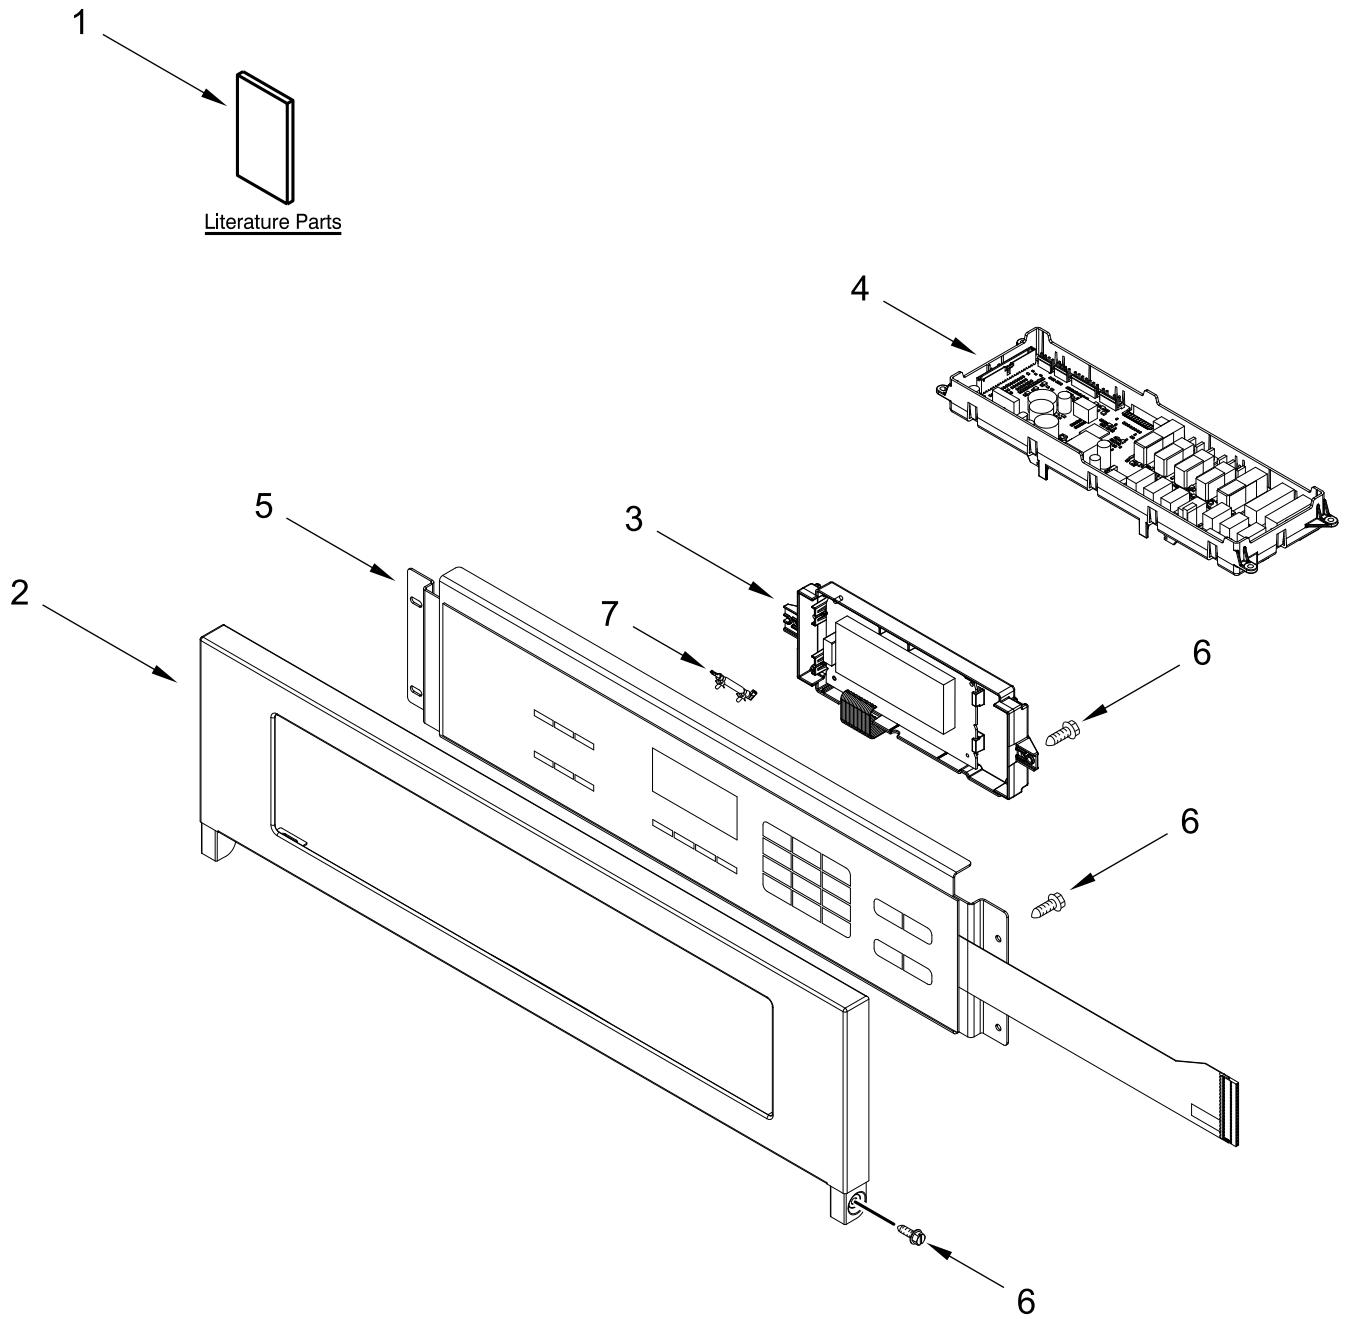

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10721210	Control	7	W10794084	Fuse, Thermal
	W10758300	Guide, Use & Care	5		Assembly, Membrane			FOLLOWING PARTS NOT ILLUSTRATED
	W10758285	Instructions, Installation		W10694995	Black		W11157777	Harness, Main
	W10776932	Sheet, Tech		W10694996	White		W11177680	Harness, Latch
	W10767148	Diagram, Wiring	6	7101P427-60	Screw		W10409840	Harness, EOL (MRC)
2		Assembly, Control Panel Skin					4450800	Screw, Grounding
	W10702189	Black					4448664	Clamp, Conduit
	W10704698	White					4451761	Support, Wiring
	W10704699	Stainless					4455191	Plate, Blower Service
3	W10752316	Interface (Maxwell), User Board					4454842	Tie, Cable
							98997	Clip


# OVEN PARTS

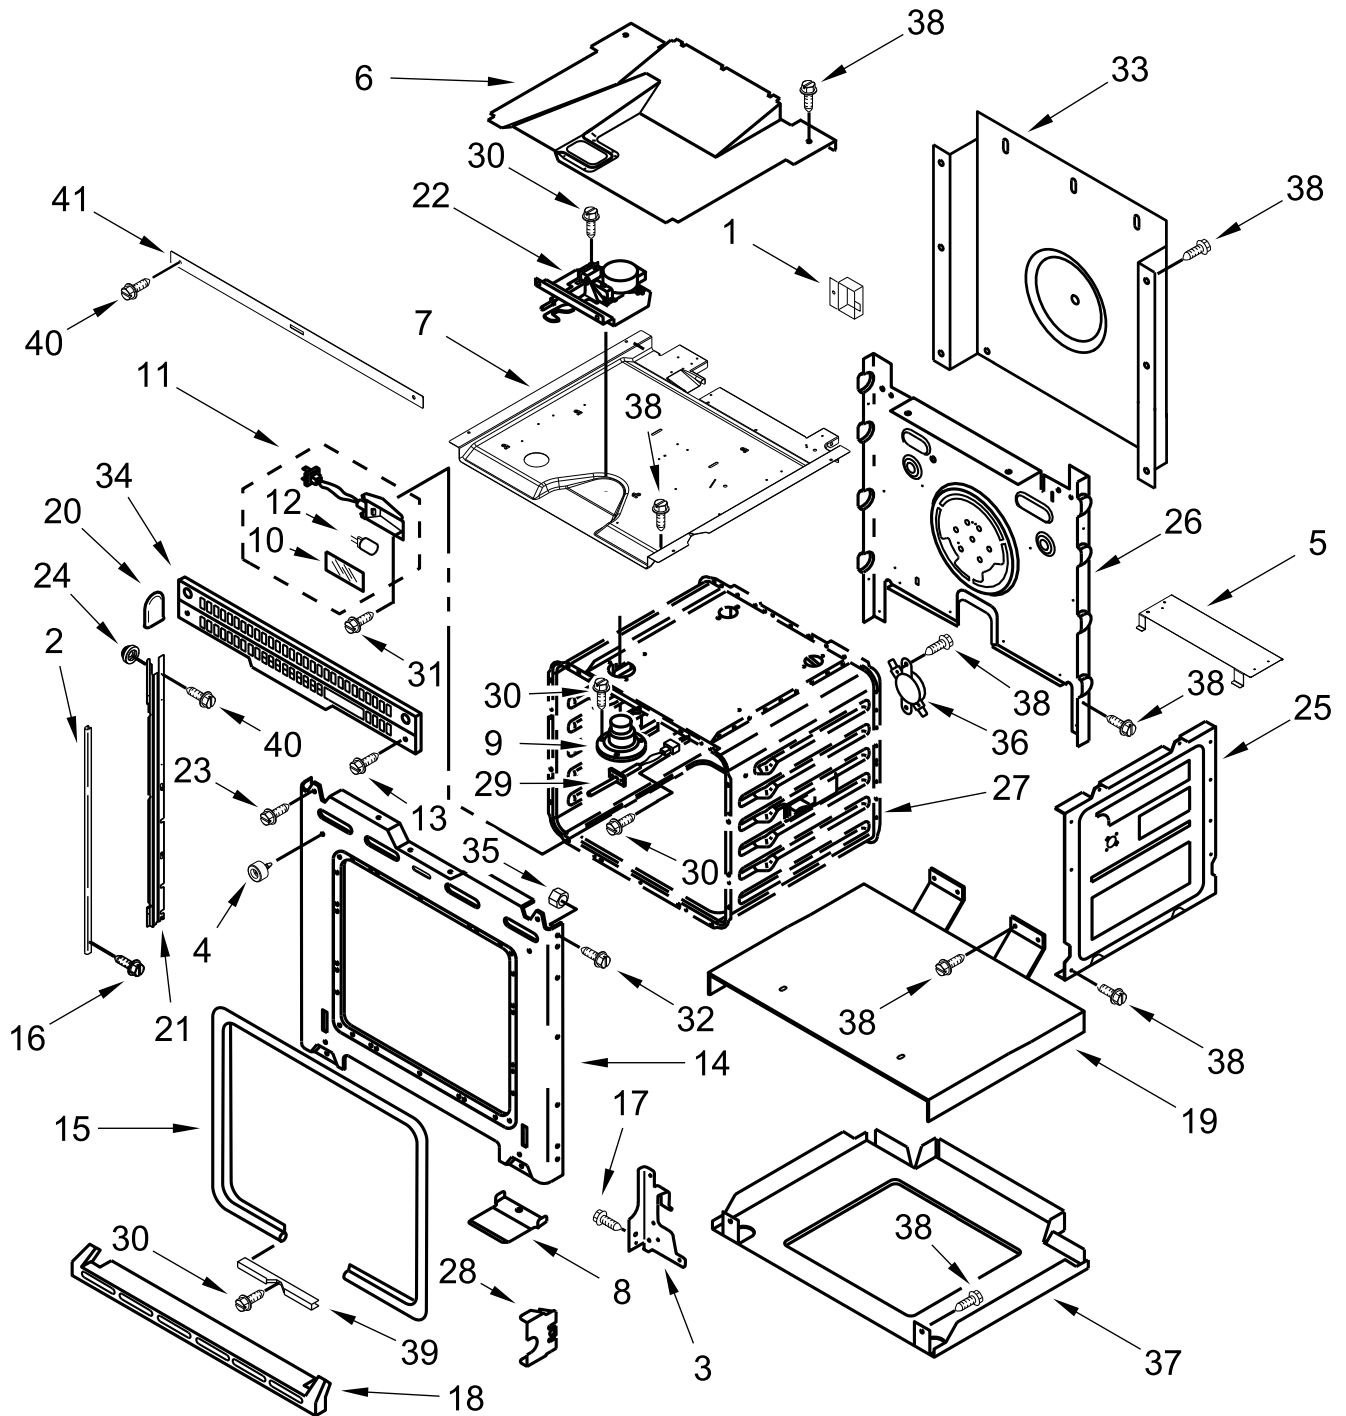

# OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector	14	9760754	Frame, Front	30	4449154	Screw
2		Trim, Side	15	4455380	Gasket, Door	31	W10720084	Screw
	W10756501	Black (Left)	16	8281236	Screw	32	4450038	Screw
	W10756502	Black (Right)	17	4449743	Screw	33	4451747	Cover, Back
	W10756497	White (Left)	18		Assembly, Bottom Vent Trim	34	W10358914	Trim, Center
	W10756498	White (Right)		W10339572	Black	35	4450118	Nut
	W10144986	Stainless (Left)		W10339573	White	36	W10777627	Thermostat (Upper)
	W10144985	Stainless (Right)		W10144973	Stainless		W10774836	Thermostat (Lower)
3	4455605	Receiver, Hinge (Left)	19	4451476	Support, Insulation	37	4450525	Base, Chassis
	4455606	Receiver, Hinge (Right)	20	4451605	Cap, Spacer	38	7101P426-60	Screw
4	W10105790	Bumper & Screw	21	4450582	Rail, Side (Left)	39	4448933	Retainer, Gasket
5	W10804302	Bracket, PCB Support		4450581	Rail, Side (Right)	40	7101P434-60	Screw
6	8302347	Divider, Center Vent	22	W10195934	Latch, Motorized	41	W10772943	Retainer, Side Rail Insulation
7	W10784377	Chassis, Top	23	4449040	Screw			FOLLOWING PARTS NOT ILLUSTRATED
8		Deflector, Vent Box	24	4448444	Grommet, Mounting Rail		4449314	Insulation, Wrap
	4455807	Black	25	W10782197	Side, Chassis		4450363	Insulation, Back
9	W11085336	Tube, Vent	26	W10784207	Back, Chassis		W10772942	Insulation, Side Rail
10	W10169756	Lens, Light	27		Liner, Oven (Not Serviceable)			
11	W11223932	Assembly, Oven Light	28	4452152	Bracket, Bottom Vent			
12	W10169757	Bulb, Light	29	W10622170	Probe, Sensor			
13	7101P427-60	Screw						


# TOP VENTING PARTS

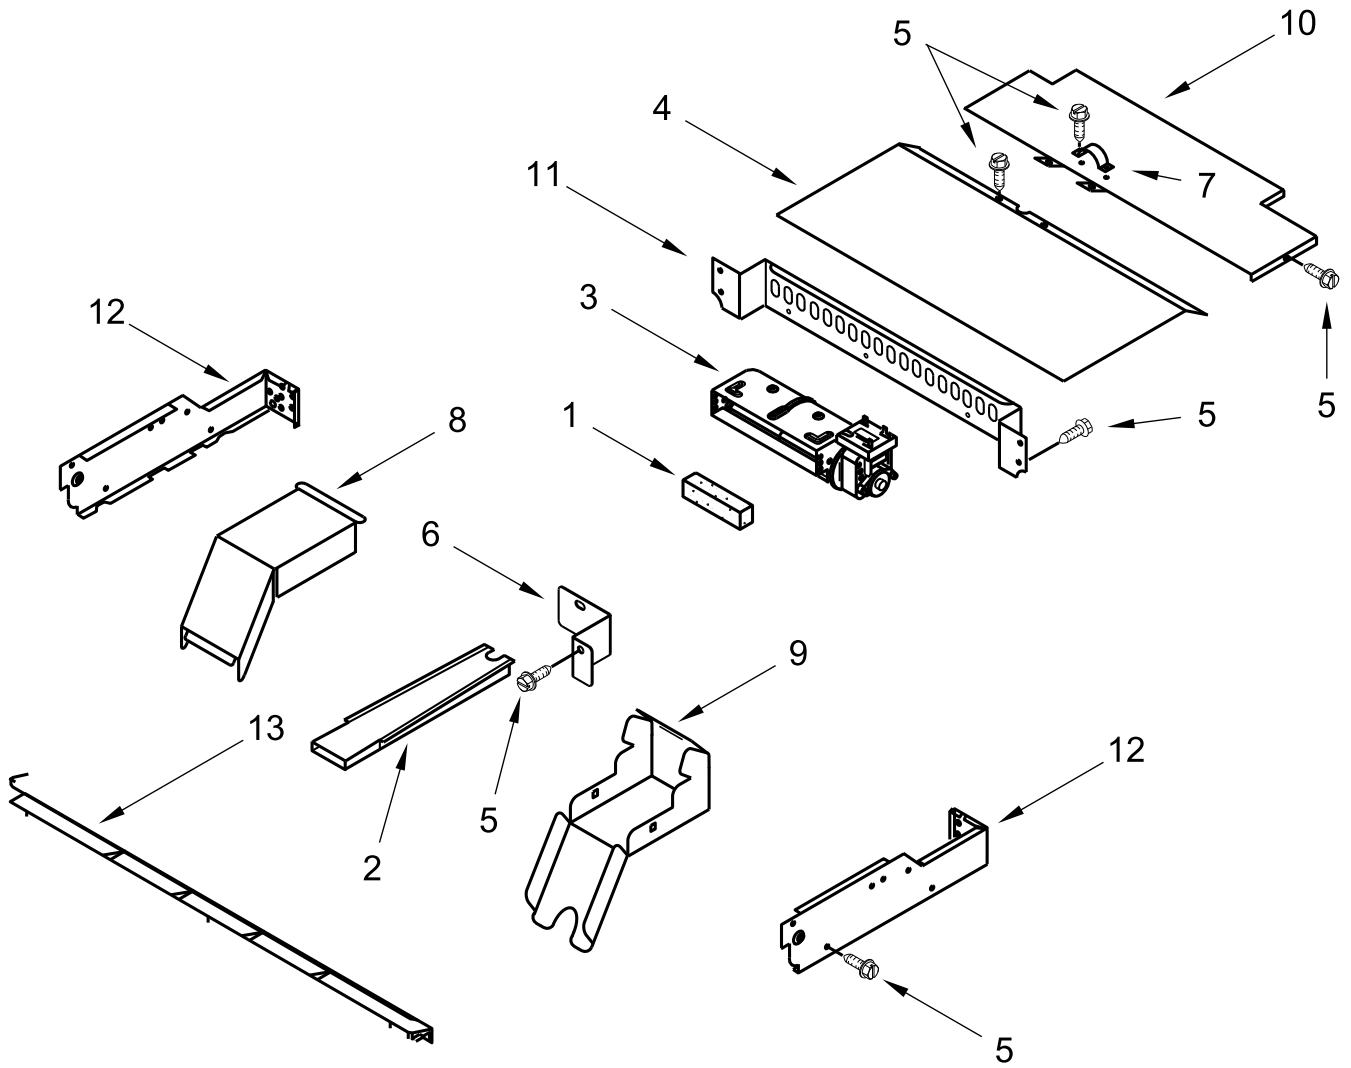

# TOP VENTING PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4451758	Block, Foam	5	7101P426-60	Screw	11	8303100	Back, Control
2	4451759	Vent, Exhaust	6	8302390	Bracket, Support Air Stop	12	W10790240	Side, Control Top (Left)
3	W10016550	Blower (45MM) (Lower)	7	4448664	Clamp, Conduit		W10755214	Side, Control Top (Right)
	W10176670	Blower (65MM) (Upper)	8	4455178	Elbow, Top Vent			
4	4452365	Cover, Top Front	9	4455177	Elbow, Bottom Vent	13	4448547	Vent, Control Panel
			10	4450549	Cover, Top Rear			

# OVEN DOOR PARTS

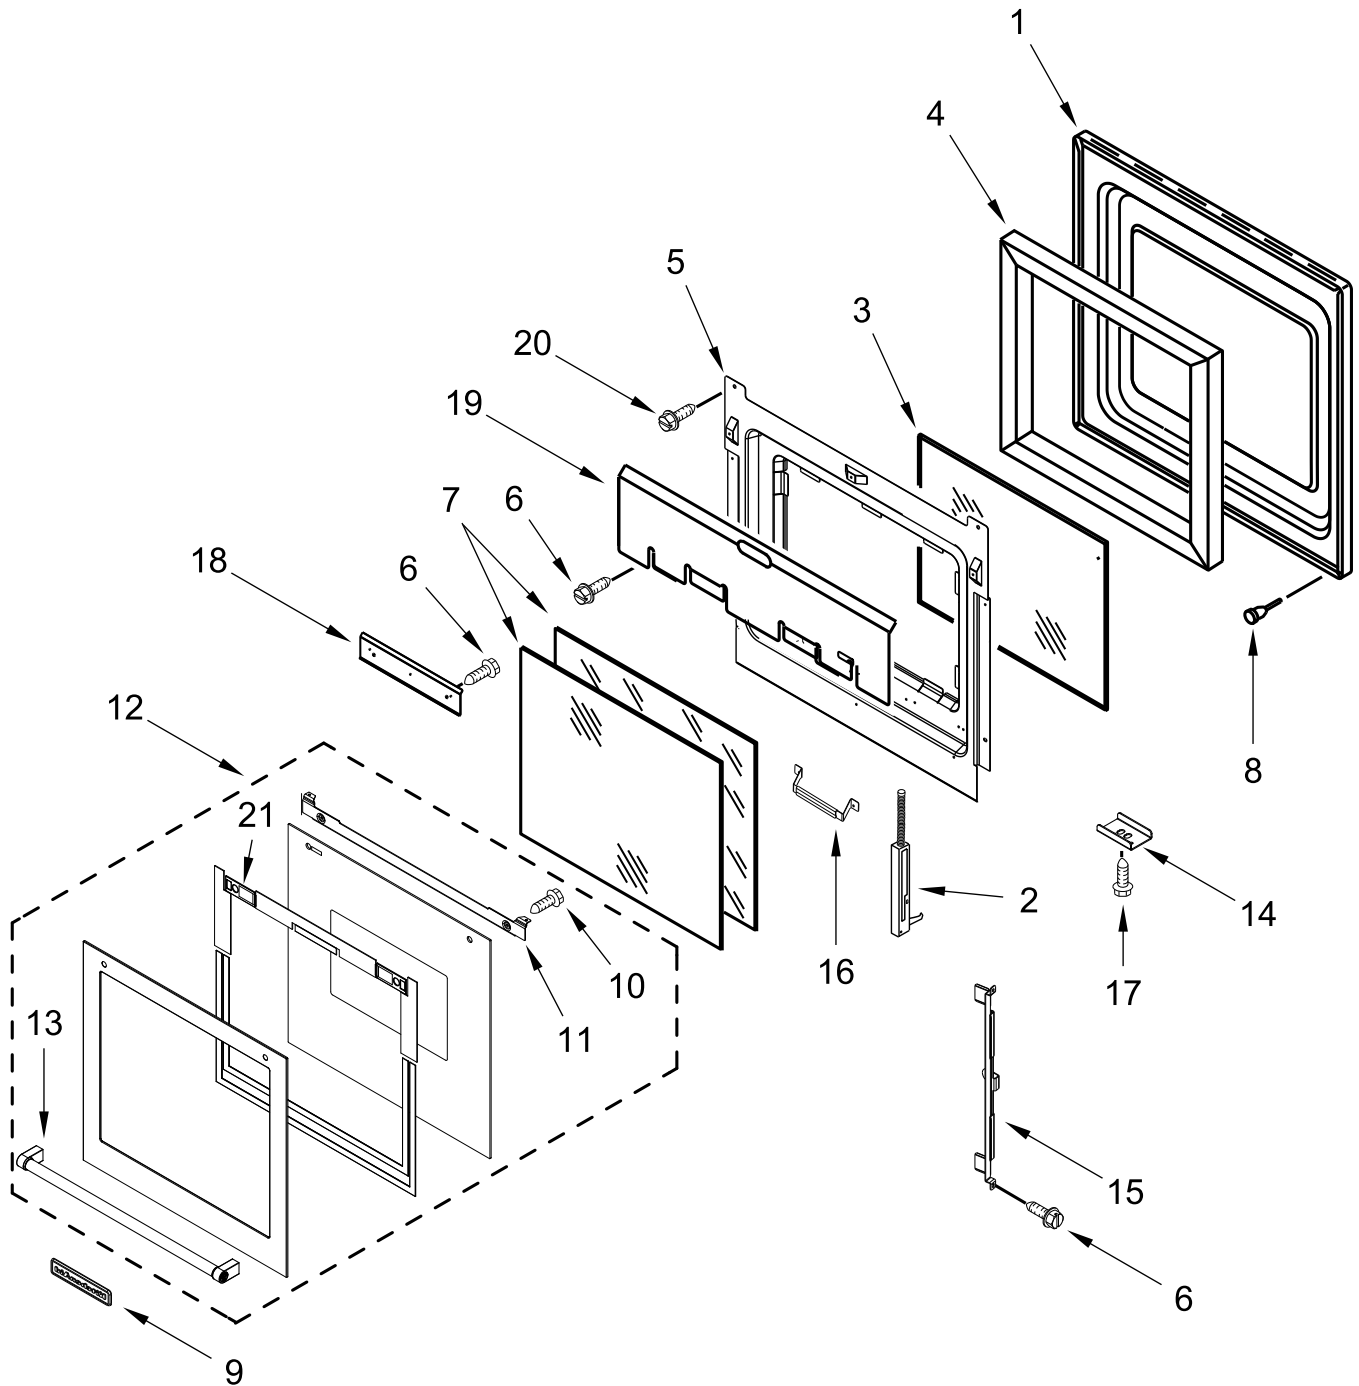




# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8303698	Liner, Door	9	W10518672	Badge (Lower Door Only)	14		Clip, Retainer
2	9760572	Hinge, Door (Left)					W10789034	Black
	9760571	Hinge, Door (Right)	10	W10480830	Screw		W10789033	White
3	4449247	Glass, Inner	11	W10708952	Bracket, Handle		W10789032	Stainless
4	4451720	Insulation, Door	12		Assembly, Door	15	9759229	Bracket, Side
5	4457130	Retainer, Glass		W10692493	Black	16	9759230	Bracket, Central
6	7101P426-60	Screw		W10692494	White	17	3400832	Screw (Black)
7	9759223	Glass, Inner		W10692415	Stainless	18	4457112	Shield, Heat Bottom
8	4448520	Bumper, Door	13		Assembly, Door Handle	19	4457101	Shield, Heat
				W10737395	Stainless	20	W10292297	Screw
						21	W10650497	Spacer, Handle

# INTERNAL OVEN PARTS

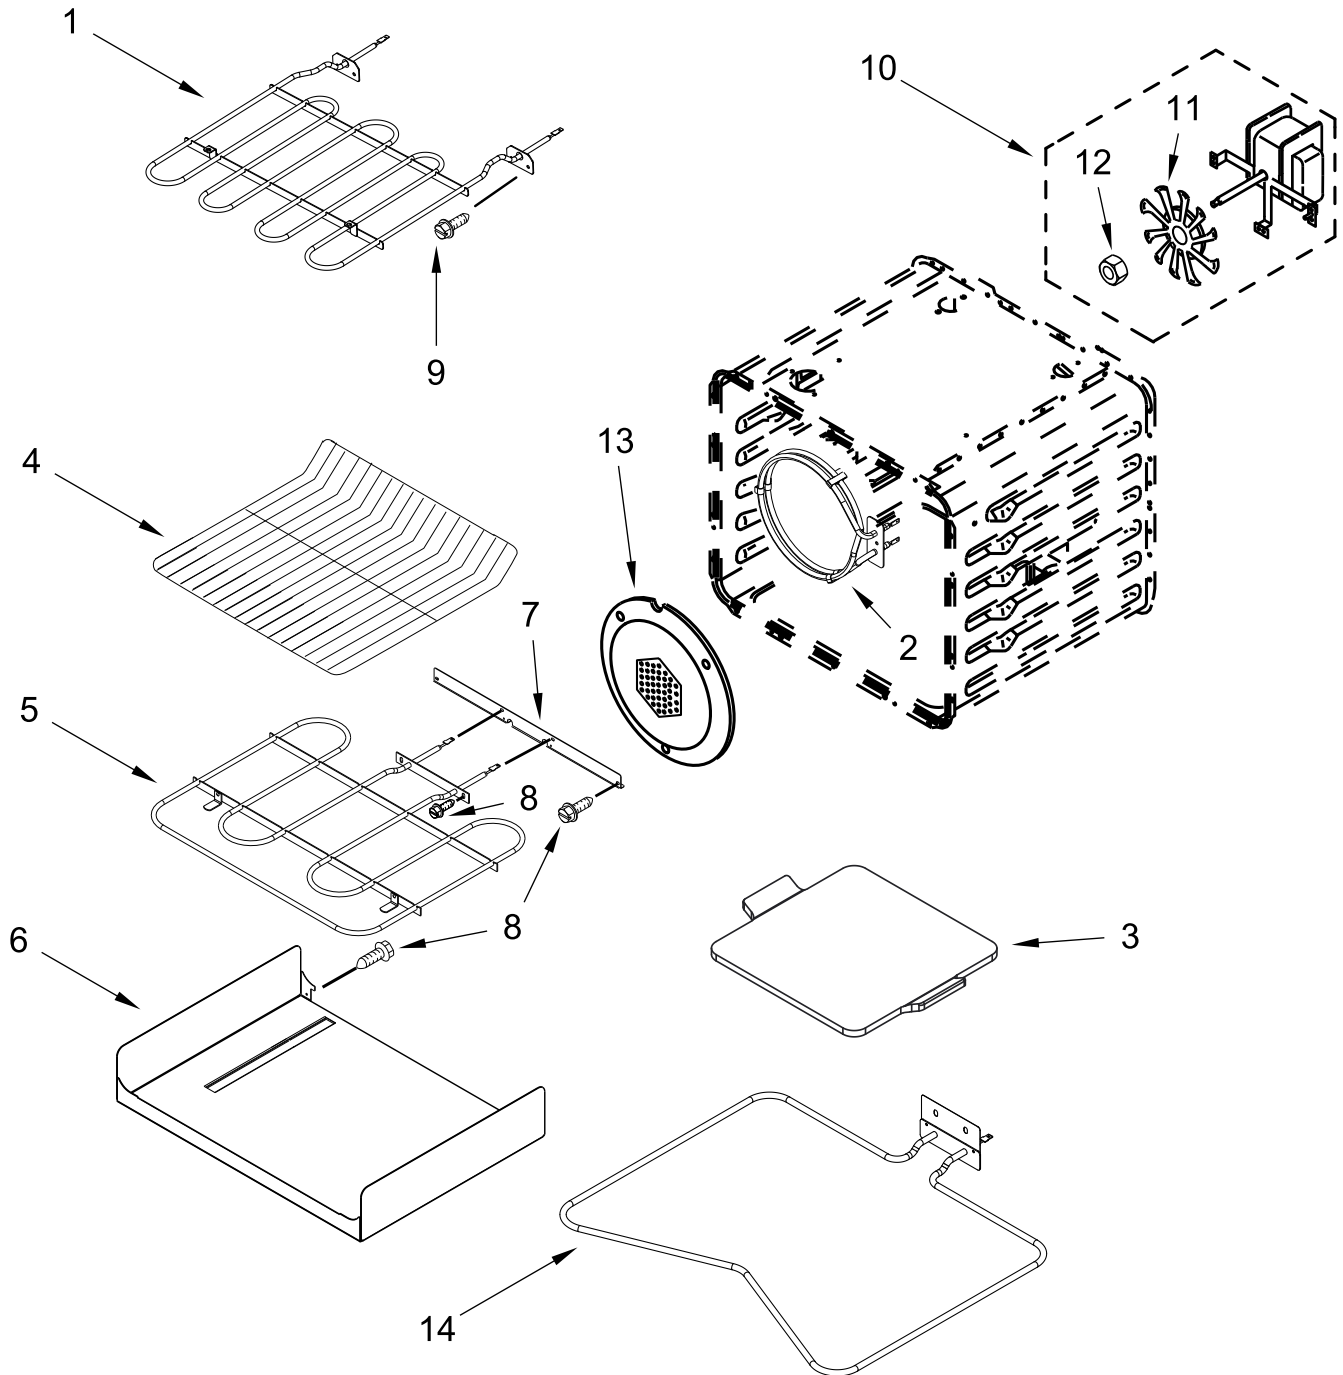

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10685631	Element, Broil	7	4450039	Cover, Hidden Bake Tray	13	W10160821	Cover, Fan
2	9760769	Element, Convection				14	W10745723	Element, Bake
3	W10696057	Stone, Baking	8	7101P426-60	Screw			
4	4448716	Rack, Oven	9	4449154	Screw			
5	W10207398	Element, Bake (Hidden)	10	W10722667	Fan, Convection			
			11	W10631503	Blade, Fan			
6	4455035	Tray, Hidden Bake	12	W10631504	Nut, Acorn (LH)			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive, Loctite
	482338	Sealer, Silastic
		ACCESSORIES
	W10355049	Wipes, Stainless Steel Cleaning
	W10355016	Cleaner, Stainless Steel
	W10275756	Cleaner, Granite
	4396923	Grid, Broiler Pan and