




**30" ELECTRIC FREESTANDING RANGE
(Radiant Elements)**

MODELS:

AER6303MFB2 (Black)
AER6303MFW2 (White)


COOKTOP PARTS

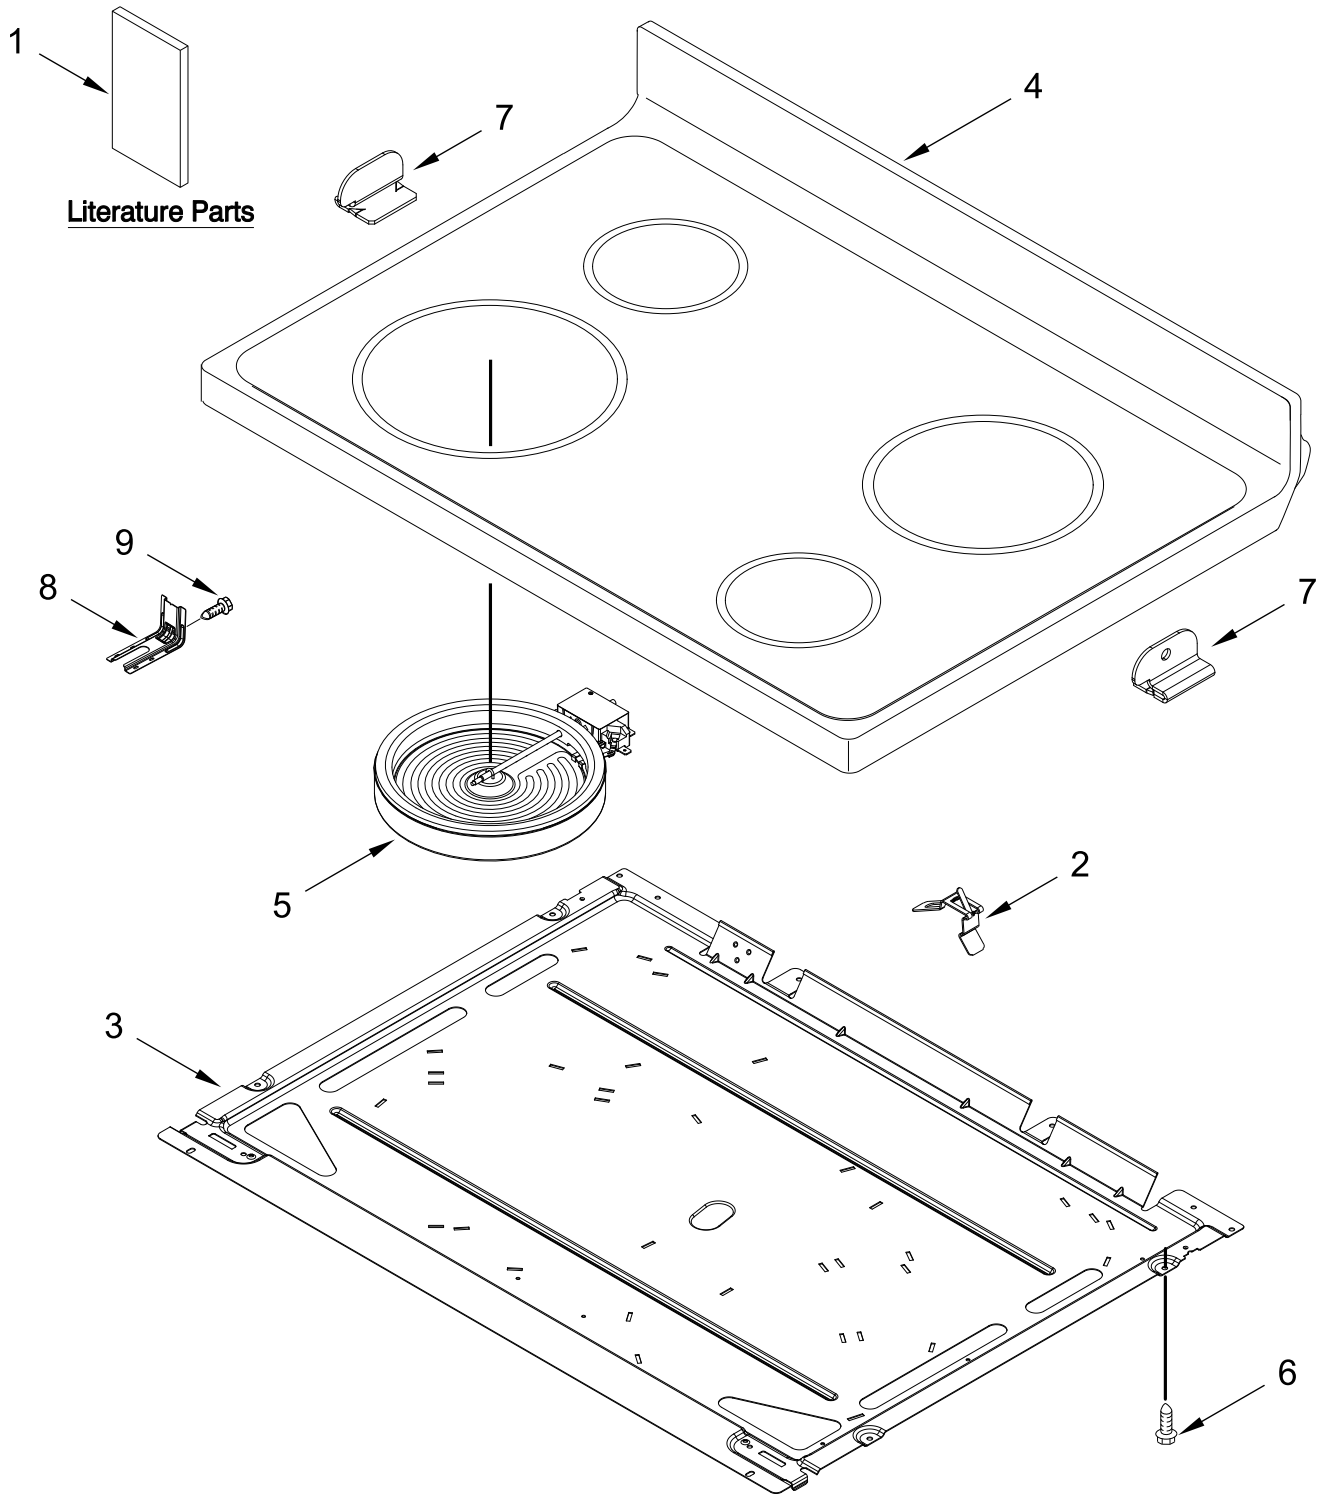

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	8273993	Element (1800W) (Left Front and Right Rear)	9	7101P485-60	Screw, Anti-Tip Kit
	W11047681	Instructions, Installation						FOLLOWING PARTS NOT ILLUSTRATED
	W10881062	User Instructions		8273994	Element (1200W) (Right Front and Left Rear)	W11134840		Harness, Wire (Main)
	W10842026	Sheet, Tech				W11171894		Harness, Cooktop (Left)
	W10873903	Diagram, Wiring	6	3196169	Screw	W11134551		Harness, Cooktop (Right)
2	W10225448	Spring, Element	7	W10607641	Bracket, Cooktop (Left)		8523279	Wire, Ground
3	W10691223	Pan, Radiant Element					313660	Clip, Ground Wire
4		Cooktop		W10607642	Bracket, Cooktop (Right)			
	W10853124	Black	8	W10306542	Bracket, Anti-Tip			
	W10853442	White						


CONTROL PANEL PARTS

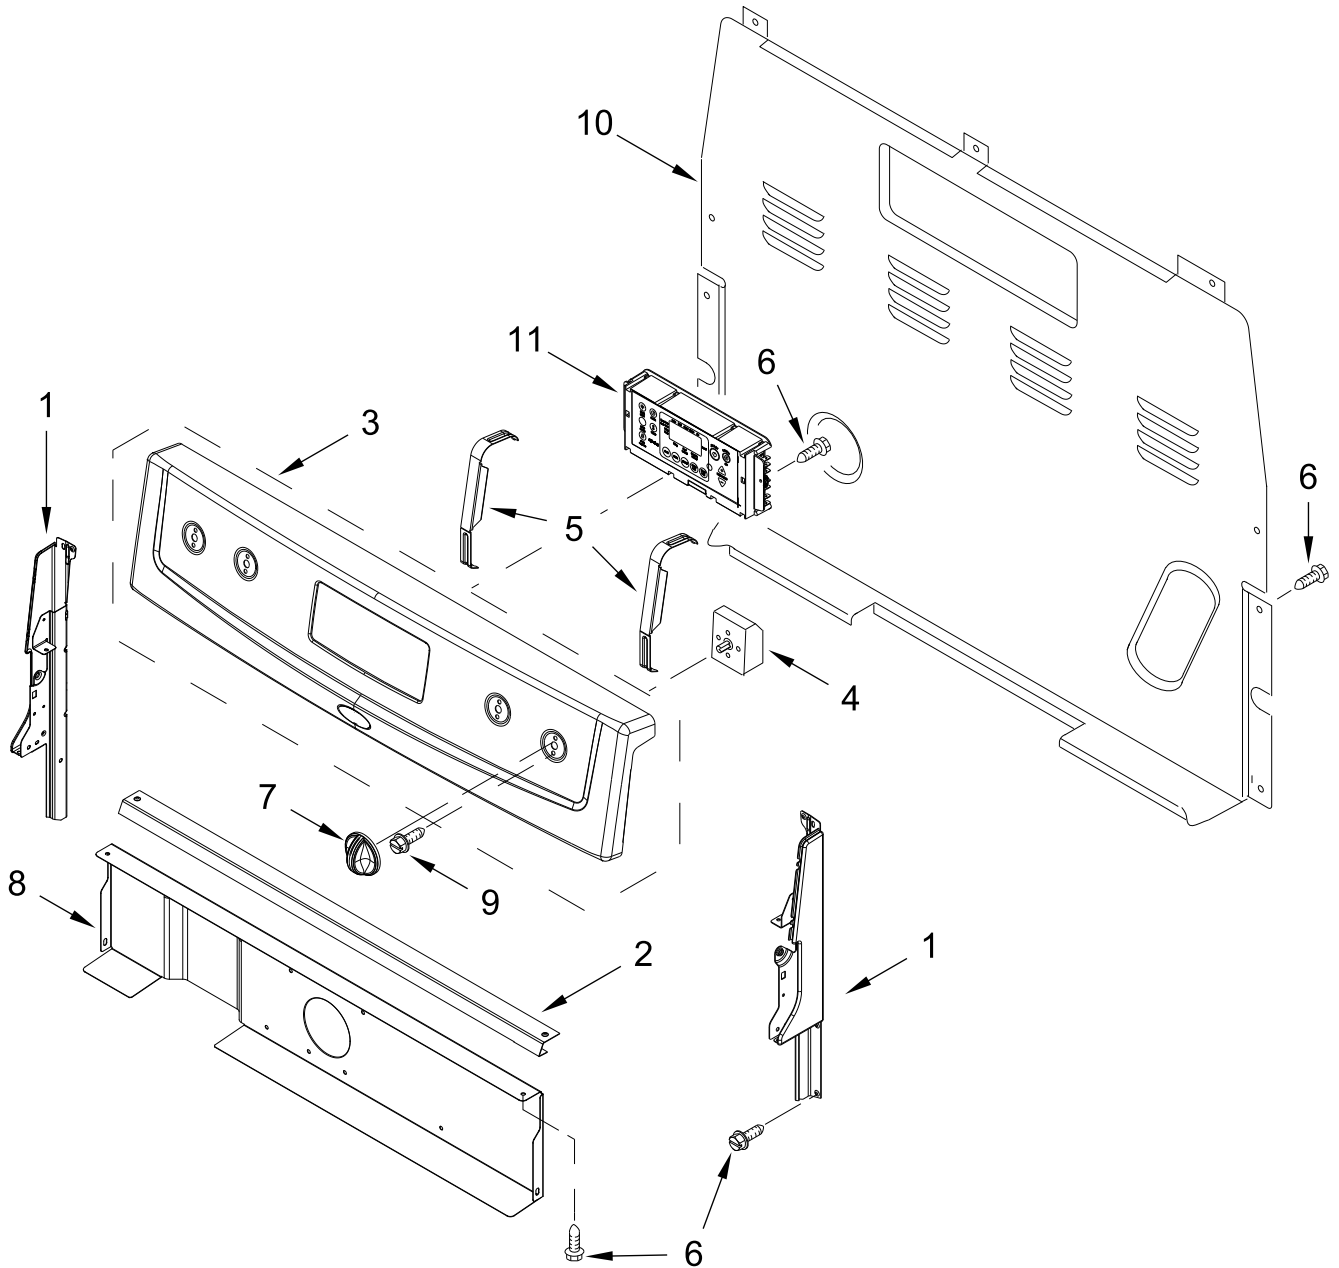

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	7		Knobs
	W11130372	Black (Left)			(Right Front and Left Rear)		W10844801	Black
	W11130371	White (Left)					W10844800	White
	W11130379	Black (Right)				8	W10134247	Shield, Heat
	W11130378	White (Right)		3148953	Switch, Infinite (Green)	9	3400882	Screw
2	W10525121	Bracket, Console Mounting			(Left Front and Right Rear)	10	8272473	Cover, Upper Rear
3		Panel, Console	5	W10695491	Bracket, Control	11		Control, Electronic (LCX)
	W11157017	Black	6	3196178	Screw		W11204487	Black
	W11157016	White					W11204488	White

DOOR PARTS

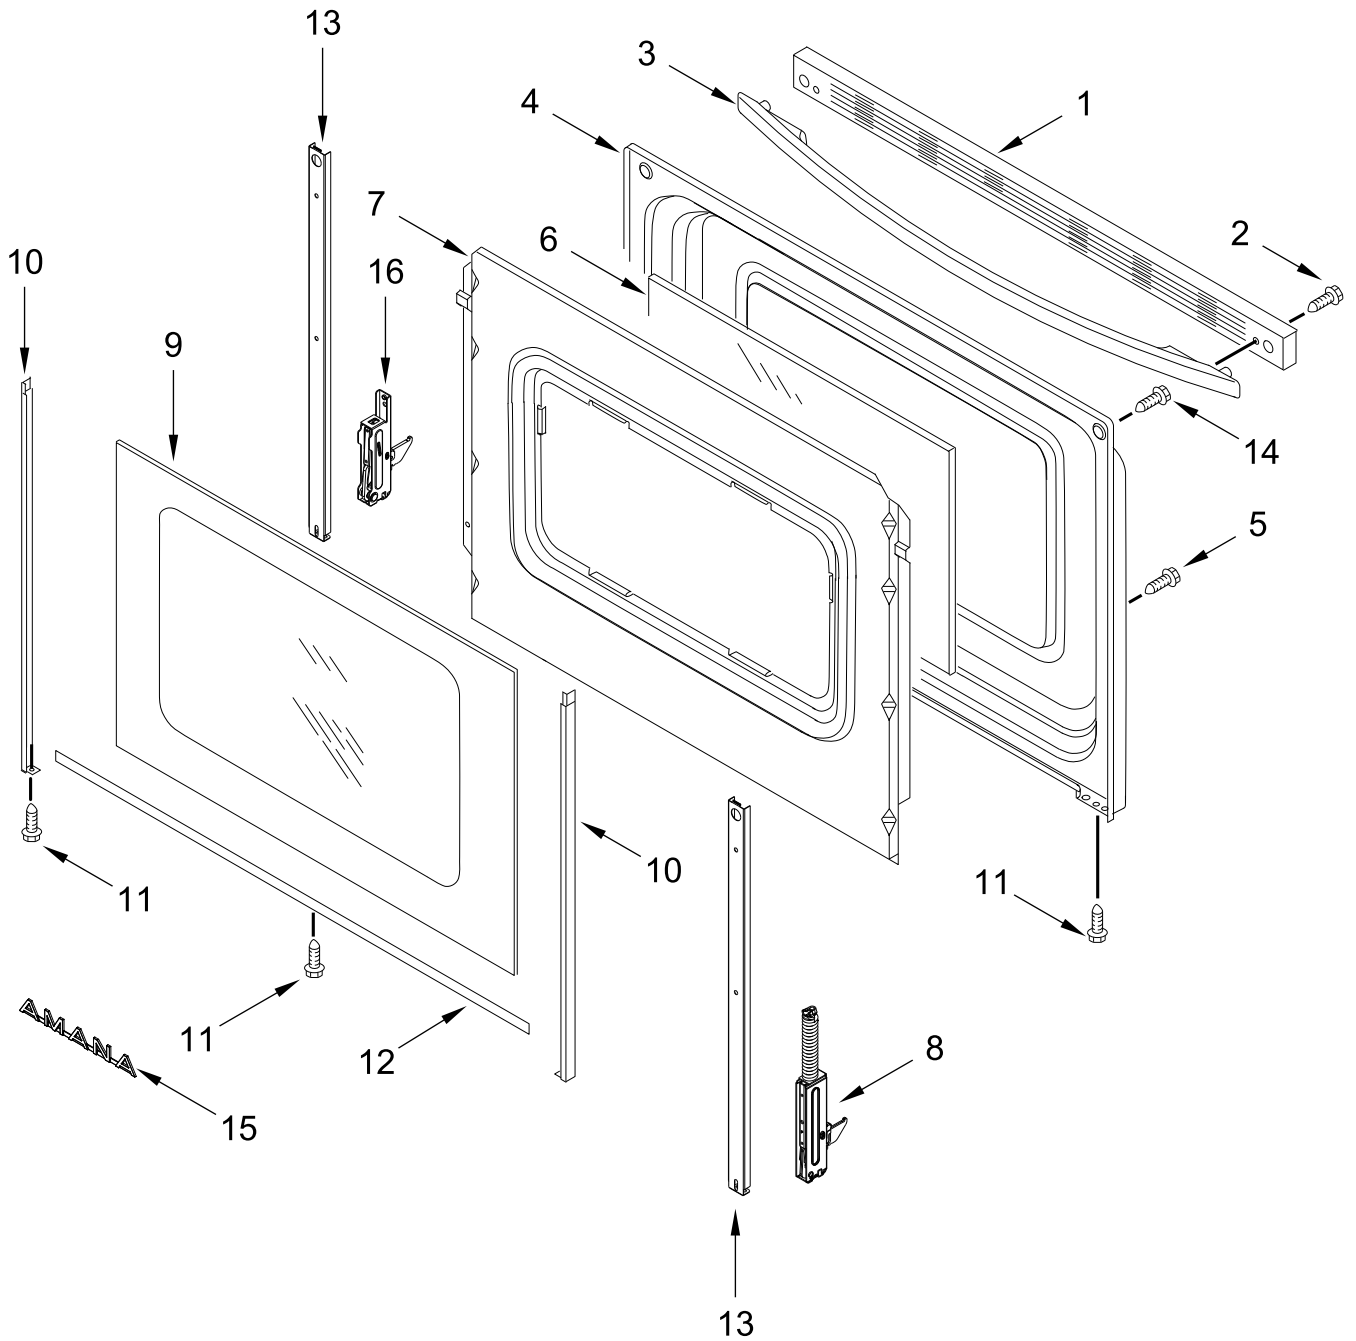


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
	W10310920	White
2	W10168559	Screw
3		Handle, Door
	W10323589	Black
	W10323588	White
4	9761344	Liner, Door
5	W10031790	Screw
6	W10620754	Glass, Inner

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	9761505	Retainer, Insulation
8	W10299225	Hinge, Active
9		Glass, Outer
	W10886896	Black
	W10851723	White
10		Trim, Side
	W10746436	Black (Left)
	8523172	White (Left)
	W10746435	Black (Right)
	8523166	White (Right)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12		Trim, Lower
	8523177	Black
	8523175	White
13	W10544179	Strap, Door
14	W10200660	Screw
15		Badge
	W10846751	Black
	W10849465	White
16	W10299227	Hinge, Door (Passive)


CHASSIS PARTS

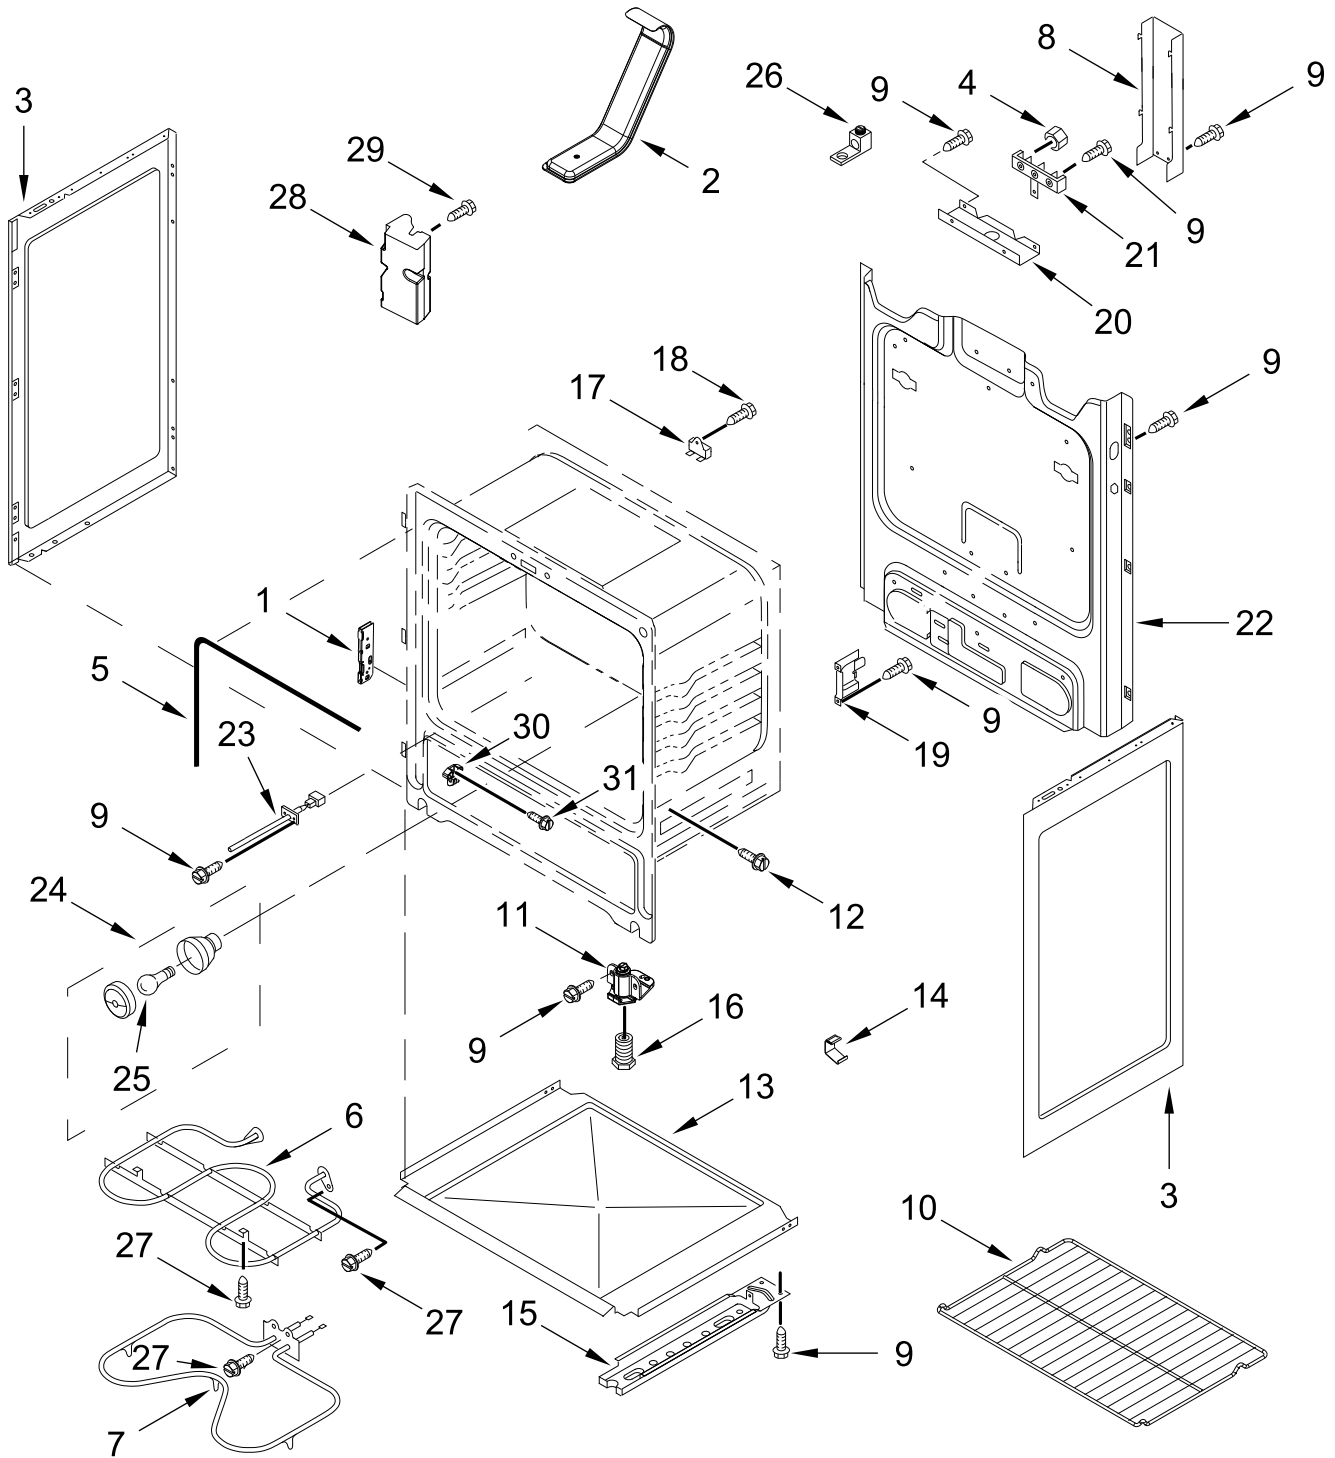

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	14	W10137382	Clip, Panel	25	W10571723	Bulb, Halogen 40 Watts
2	W10134285	Tube, Vent	15	W10390008	Assembly, Base Rail (Left)	26	W10281322	Kit, Bare Wire Adapter Block
3		Panel, Side		W10390007	Assembly, Base Rail (Right)	27	3196154	Screw
	W10162245	Black				28	W10910404	Counterweight
	W10575396	White				29	W11034869	Screw
4	3400029	Nut	16	W10058460	Foot, Leveling	30	W10674705	Glide, Drawer Front
5	W10129032	Seal, Door	17	3196548	Fuse, Thermal	31	3400080	Screw
6	9757340	Element, Broil	18	3196172	Screw			FOLLOWING PARTS NOT ILLUSTRATED
7	W11111743	Element, Bake	19	W10404688	Clip, Oven Support		W10333344	Insulation, Flue
8	W10326122	Cover, Terminal Block	20	3186034	Bracket, Service		8273263	Insulation, Wrap
9	3196169	Screw	21	W10245259	Block, Terminal		8272611	Insulation, Back
10	W10268578	Rack, Oven	22	W10289149	Back, Main			
11	W10341186	Assembly, Front Foot	23	W10181986	Sensor, Oven			
12	W10067840	Screw	24	W11175594	Assembly, Light			
13	8054068	Retainer, Insulation						

DRAWER AND BROILER PARTS

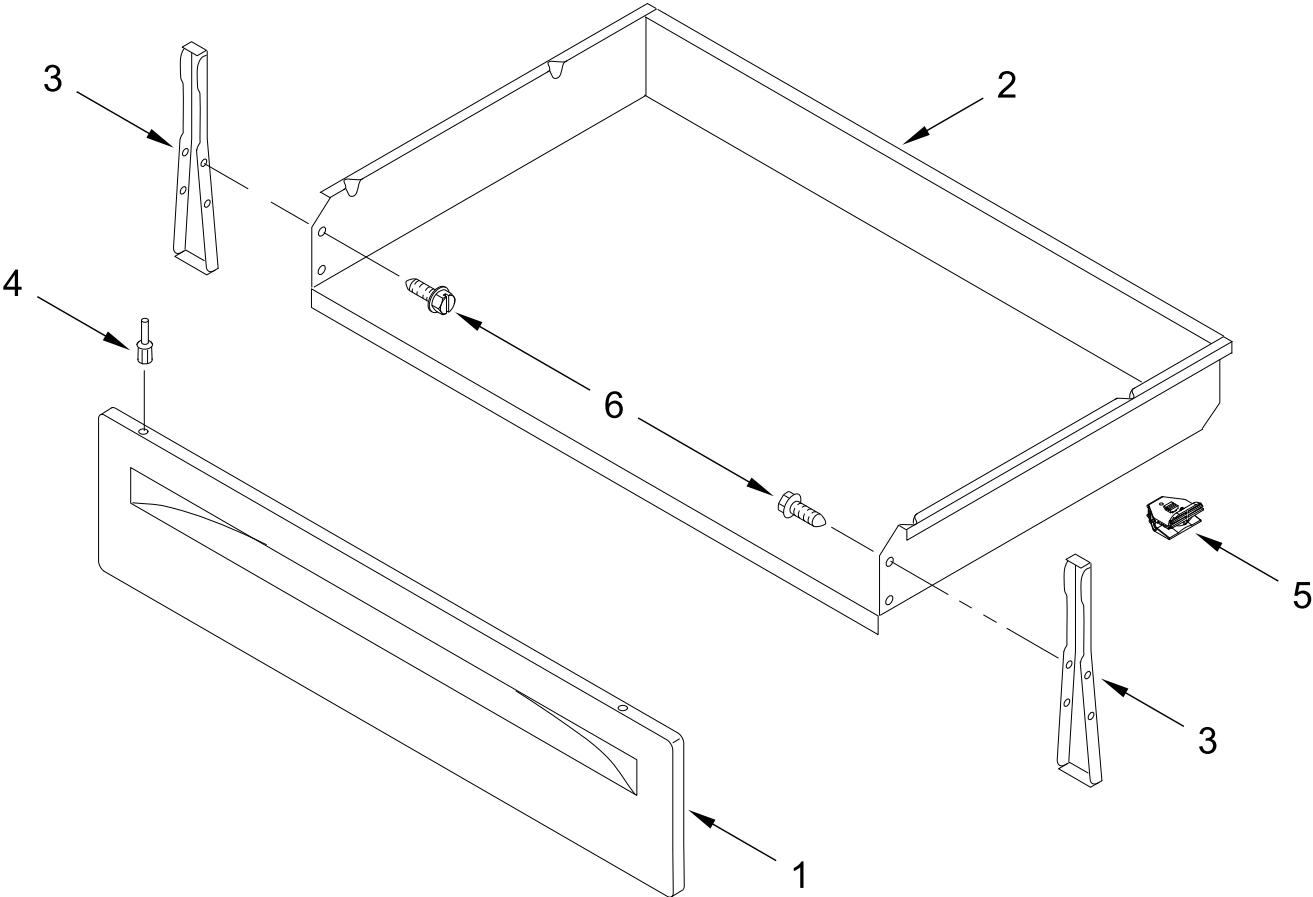

DRAWER AND BROILER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	4		Rivet, Push	5	W10674708	Glide, Drawer Rear
	W11123900	Black		3196813	Black	6	3196165	Screw
	W11123901	White		3196814	White			
2	W10688022	Drawer, Storage						
3	W10462912	Bracket, Mounting Drawer						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	8212473	Universal Silver
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3191048	Glass Cleaner
	4396923	Grid, Broiler Pan and