

Quick Start Guide

Appearance may vary depending on model.

Using Your Top-Loading High Efficiency Low Water Washer

1 SORT AND LOAD LAUNDRY

2 ADD HE DETERGENT & LAUNDRY PRODUCTS TO DISPENSERS*

Remove inside tray for powder HE detergent.

Follow manufacturer's instructions to determine amount of laundry products to use.

3 TOUCH POWER TO TURN ON THE WASHER

4 TOUCH SETTINGS FOR "WHAT TO WASH"

5 TOUCH SETTINGS FOR "HOW TO WASH"

6 ADJUST CYCLE MODIFIERS OR ADD OPTIONS*, IF DESIRED

7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE

* NOTE: Not all cycles, settings or options are available with all models. Read "Cycle Guide" in Use and Care Guide before using washer for more information on your model's options and features.

WHAT TO WASH

• Mixed • Casuals • Whites • Delicates • Bulky/Sheets

• Clean Washer
• Rinse & Spin• Oxi
• Additives
• Utility Tools

Add Garment

0:45

HOW TO WASH

• Normal • Quick • Cold • Deep Water • ColorLast

Cold • Hot • Light Heavy • None High

Temperature • Soil Level • Spin Speed • Extra Rinse • Presoak

cabrio



Hold to Start



Lid

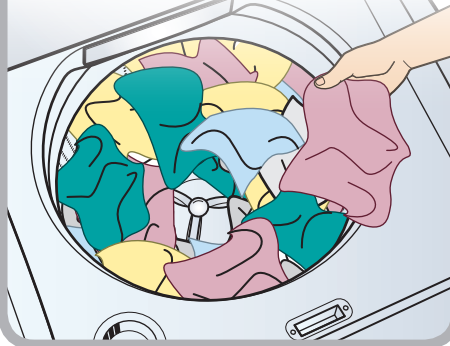


Guide de démarrage rapide

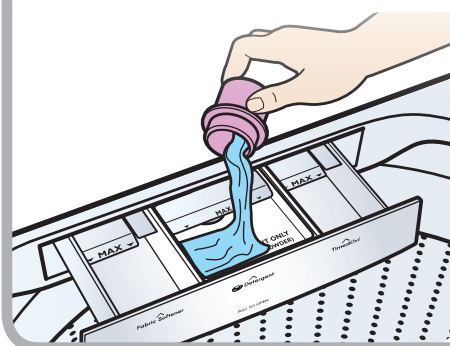
L'aspect peut varier selon le modèle.

Utilisation de la laveuse à chargement frontal à haute efficacité et à faible consommation d'eau

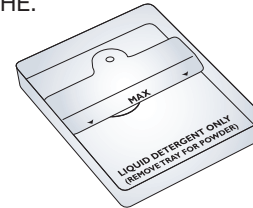
1

TRIER, PUIS CHARGER LE LINGE DANS LA LAVEUSE

2

AJOUTER LE DÉTERGENT ET LES PRODUITS DE LESSIVE HE DANS LES DISTRIBUTEURS*

Retirer le plateau intérieur pour le détergent en poudre HE.



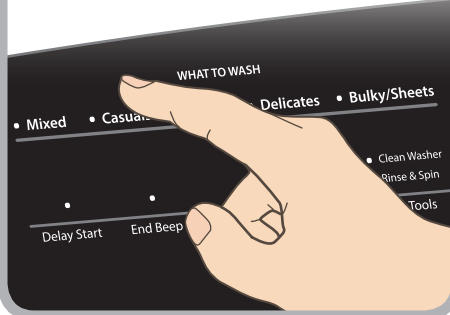
Suivre les instructions du fabricant pour déterminer la quantité de produits de lessive à utiliser.



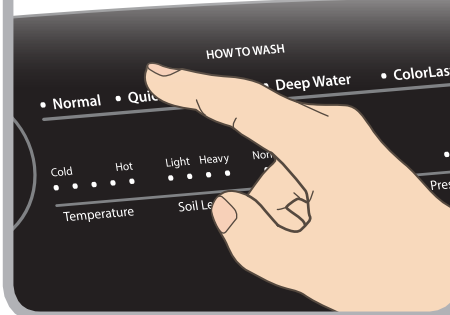
3

APPUYER SUR POWER (MISE SOUS TENSION) POUR METTRE LA LAVEUSE EN MARCHÉ

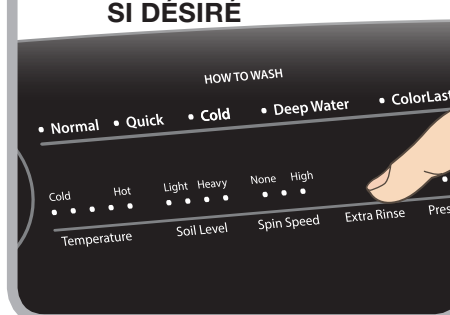
4

SÉLECTIONNER LES RÉGLAGES POUR "WHAT TO WASH" (ARTICLES À LAVER)

5

SÉLECTIONNER LES RÉGLAGES POUR "HOW TO WASH" (MÉTHODE DE LAVAGE)

6

RÉGLER LES MODIFICATEURS DE PROGRAMME OU AJOUTER DES OPTIONS*, SI DÉSIRÉ

7

APPUYER SANS RELÂCHER SUR START/PAUSE (MISE EN MARCHÉ/PAUSE) POUR DÉMARRER LE PROGRAMME

*REMARQUE : Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le "Guide des programmes" dans le Guide d'utilisation et d'entretien avant d'utiliser la laveuse pour plus d'informations sur les options et les caractéristiques de votre modèle.