

MAYTAG
COMMERCIAL TECHNOLOGY



Quick Start Guide Top-Loading High Efficiency Washer

Appearance may vary depending on model.

⚠ WARNING

Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids.

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Doing so can result in death, explosion, or fire.

1 SORT AND LOAD LAUNDRY

2 ADD HE DETERGENT & LAUNDRY PRODUCTS TO DISPENSERS*

Remove inside tray for powder HE detergent.

Follow manufacturer's instructions to determine amount of laundry products to use.

3 TOUCH POWER TO TURN ON THE WASHER

power

4 SELECT THE DESIRED CYCLE FOR YOUR LOAD*

5 ADJUST CYCLE SETTINGS, IF DESIRED*

6 SELECT ADDITIONAL OPTIONS*

7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE

hold to start
press to pause

* **NOTE:** Not all cycles, settings or options are available with all models. Read "Cycle Guide" in Use and Care Guide before using washer for more information on your model's options and features.

MAYTAG
COMMERCIAL TECHNOLOGY



Guide de démarrage rapide Laveuse à chargement frontal à haute efficacité

L'aspect peut varier selon le modèle.

⚠️ AVERTISSEMENT



Risque d'incendie

Ne jamais mettre des articles humectés d'essence ou d'autres fluides inflammables dans la laveuse.

Aucune laveuse ne peut complètement enlever l'huile.


Ne pas faire sécher des articles qui ont été salis par tout genre d'huile (y compris les huiles de cuisson).

Le non-respect de ces instructions peut causer un décès, une explosion ou un incendie.

1 TRIER, PUIS CHARGER LE LINGE DANS LA LAVEUSE



2 AJOUTER LE DÉTERGENT ET LES PRODUITS DE LESSIVE HE DANS LES DISTRIBUTEURS*

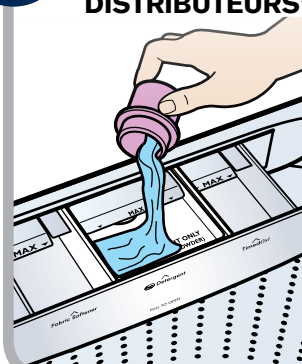

Retirer le plateau intérieur pour le détergent en poudre HE.



Suivre les instructions du fabricant pour déterminer la quantité de produits de lessive à utiliser.

3 APPUYER SUR POWER (MISE SOUS TENSION) POUR METTRE LA LAVEUSE EN MARCHÉ




power


4 SÉLECTIONNER LE PROGRAMME SOUHAITÉ POUR LA CHARGE*



5 AJUSTER LES RÉGLAGES DU PROGRAMME SI DÉSIRÉ*

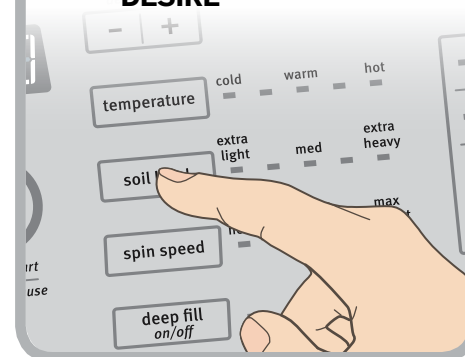

6 SÉLECTIONNER TOUTE OPTION SUPPLÉMENTAIRE*

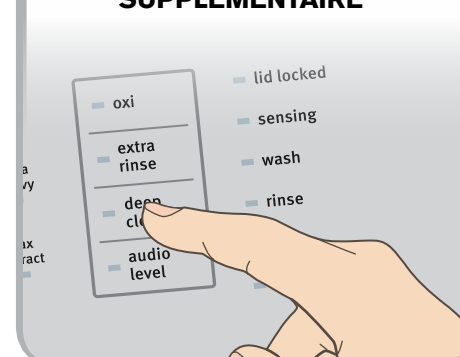

7 APPUYER SANS RELÂCHER SUR START/PAUSE (MISE EN MARCHÉ/PAUSE) POUR DÉMARRER LE PROGRAMME



hold to start
press to pause

*REMARQUE : Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le "Guide des programmes" et le Guide d'utilisation et d'entretien avant d'utiliser la laveuse pour plus d'informations sur les options et les caractéristiques de votre modèle.