



**BRAVOS XL**  
steam

**MCT** Maytag Commercial Technology

# Quick Start Guide

## Using Your High Efficiency Dryer

Appearance may vary depending on model.

**1 CLEAN THE LINT SCREEN**

**2 LOAD THE DRYER**

**3 TOUCH POWER TO TURN ON THE DRYER**

*power*

**4 SELECT THE DESIRED CYCLE FOR YOUR LOAD\***

**5 ADJUST CYCLE SETTINGS, IF DESIRED\***

**6 SELECT ANY ADDITIONAL OPTIONS\***

**7 TOUCH AND HOLD START/PAUSE TO BEGIN CYCLE**

*hold to start*

\* **NOTE:** See "Cycle Guide" in the Use and Care Guide for more information about cycles, settings, and options. Not all cycles, settings, and options are available with all models. Read your Use and Care Guide before using your dryer.

**BRAVOS XL**  
steam

MCT Maytag Commercial Technology




L'aspect peut varier selon le modèle.


## Guide de démarrage rapide

### Comment utiliser votre sècheuse haute efficacité.

**1** NETTOYER LE FILTRE À CHARPIE

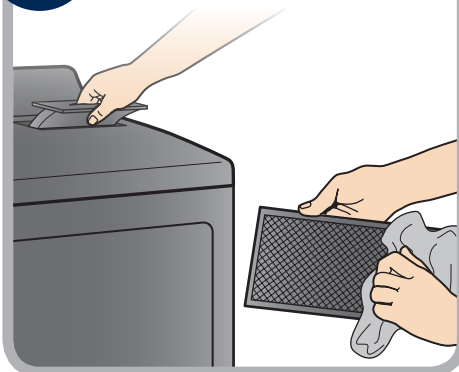

**2** CHARGER LA SÈCHEUSE

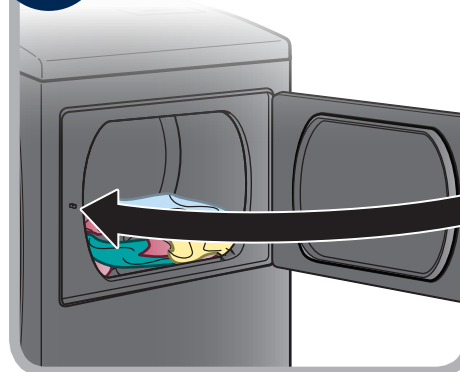


**3** APPUYER SUR POWER (MISE SOUS TENSION) POUR METTRE LA SÈCHEUSE EN MARCHÉ




**4** SÉLECTIONNER LE PROGRAMME SOUHAITÉ POUR LA CHARGE\*



**5** AJUSTER LES RÉGLAGES DE PROGRAMME SI DÉSIRÉ\*

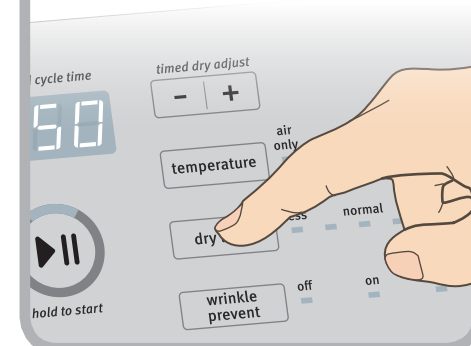

**6** SÉLECTIONNER TOUTE OPTION SUPPLÉMENTAIRE\*

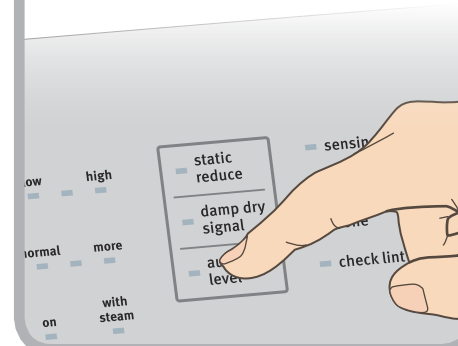

**7** APPUYER SANS RELÂCHER SUR START/ PAUSE (DÉMARRER/ PAUSE) POUR DÉMARRER LE PROGRAMME



\***REMARQUE** : Voir le "Guide des programmes" du Guide d'utilisation et d'entretien pour plus d'informations sur les programmes, les réglages et les options. Certains programmes, réglages et options ne sont pas disponibles sur certains modèles. Lire le Guide d'utilisation et d'entretien avant d'utiliser la sècheuse.